

Note: We are enhancing our systems and you may notice duplicate entries/missing/outdated data. During this interim period, please contact our Customer Service at <https://www.ul.com/about/locations>.

Valves, Electrically Operated

COMPANY

DANFOSS A/S

Bldg E14s1a
Nordborgvej 81
6430 Nordborg
Nordborg, Syddanmark 6430 Denmark

MH7648

General purpose valves, Model(s): AKV15 , followed by -1, -2, -3, -4, with coil enclosures 018Z7603, -7611, -7612, -7613 or 018F7681, -82, -83, -89, -91, -92, -93, -94, -95, -99.

General purpose valves, Model(s): AKVA15 , followed by -1, -2, -3, -4, with coil enclosures 018Z7603, -7611, -7612, -7613 or 018F7681, -82, -83, -89, -91, -92, -93, -94, -95, -99.

General purpose valves, Model(s): AKVA201 with assembly part nos. 018F4100, -01, -02, -03, -04, -05, -06, -07, -08, -09, -10, -11, -12, -13, -14, -15 , -16, -17, -18 , -19, -20, -21, -22, -23, -24, -25 , 26, -27, -28, -29, -30, -31, -32, -33, -34 and -35

General purpose valves, Model(s): AKVA202 with assembly part nos. 018F4100, -01, -02, -03, -04, -05, -06, -07, -08, -09, -10, -11, -12, -13, -14, -15 , -16, -17, -18 , -19, -20, -21, -22, -23, -24, -25 , 26, -27, -28, -29, -30, -31, -32, -33, -34 and -35

General purpose valves, Model(s): AKVA204 with assembly part nos. 018F4100, -01, -02, -03, -04, -05, -06, -07, -08, -09, -10, -11, -12, -13, -14, -15 , -16, -17, -18 , -19, -20, -21, -22, -23, -24, -25 , 26, -27, -28, -29, -30, -31, -32, -33, -34 and -35

General purpose valves, Model(s): AKVA205 with assembly part nos. 018F4100, -01, -02, -03, -04, -05, -06, -07, -08, -09, -10, -11, -12, -13, -14, -15 , -16, -17, -18 , -19, -20, -21, -22, -23, -24, -25 , 26, -27, -28, -29, -30, -31, -32, -33, -34 and -35

General purpose valves, Model(s): EVRP followed by 0.4, 0.5, 0.65, 0.85, 1.0, 1.2, 1.4, 2.0 or 3.0, with coil assembly part nos. 018F4100, -01, -02, -03, -04, -05, -06, -07, -08, -09, -10, -11, -12, -13, -14, -15 , -16, -17, -18 , -19, -20, -21, -22, -23, -24, -25 , 26, -27, -28, -29, -30, -31, -32, -33, -34 and -35

General purpose valves, with coil enclosure, Model(s): 018Z7511, -12, -13, -21, -22, -23

General purpose valves, with coil enclosure, Model(s): AKV201 with assembly part nos. 018F4100, -01, -02, -03, -04, -05, -06, -07, -08, -09, -10, -11, -12, -13, -14, -15, -16, -17, -18, -19, -20, -21, -22, -23, -24, -25, 26, -27, -28, -29, -30, -31, -32, -33, -34 and -35

General purpose valves, with coil enclosure, Model(s): AKV202 with assembly part nos. 018F4100, -01, -02, -03, -04, -05, -06, -07, -08, -09, -10, -11, -12, -13, -14, -15, -16, -17, -18, -19, -20, -21, -22, -23, -24, -25, 26, -27, -28, -29, -30, -31, -32, -33, -34 and -35

General purpose valves, with coil enclosure, Model(s): AKV203 with assembly part nos. 018F4100, -01, -02, -03, -04, -05, -06, -07, -08, -09, -10, -11, -12, -13, -14, -15, -16, -17, -18, -19, -20, -21, -22, -23, -24, -25, 26, -27, -28, -29, -30, -31, -32, -33, -34 and -35

General purpose valves, with coil enclosure, Model(s): AKV204 with assembly part nos. 018F4100, -01, -02, -03, -04, -05, -06, -07, -08, -09, -10, -11, -12, -13, -14, -15, -16, -17, -18, -19, -20, -21, -22, -23, -24, -25, 26, -27, -28, -29, -30, -31, -32, -33, -34 and -35

General purpose valves, with coil enclosure, Model(s): AKV205 with assembly part nos. 018F4100, -01, -02, -03, -04, -05, -06, -07, -08, -09, -10, -11, -12, -13, -14, -15, -16, -17, -18, -19, -20, -21, -22, -23, -24, -25, 26, -27, -28, -29, -30, -31, -32, -33, -34 and -35

General purpose valves, with coil enclosure, Model(s): AKVA203 with assembly part nos. 018F4100, -01, -02, -03, -04, -05, -06, -07, -08, -09, -10, -11, -12, -13, -14, -15, -16, -17, -18, -19, -20, -21, -22, -23, -24, -25, 26, -27, -28, -29, -30, -31, -32, -33, -34 and -35

General-purpose valve, Model(s): EV210B followed by 1.5, 2, 3, 6 or 10, followed by B, BE or SS, followed by N14, N18, N38 or N12, followed by F, followed by NC or NO, followed by ULC, with coil assemblies 018F7681, -82, -83 -86, -87, -88, -89, -91, -92, -93, -94, -95, -96, -97, -98, -99 or 018F4100, -01, -02, -03, -04, -05, -06, -07, -08, -09, -10, -11, -12, -13, -14, -15, -16, -17, -18, -19, -20, -21, -22, -23, -24, -25, -26, -27, -28, -29.

General-purpose valve, Model(s): EV210BW followed by 1.5, 2, 3, 6 or 10, followed by B, BE or SS, followed by N14, N18, N38 or N12, followed by F, followed by NC or NO, followed by ULC, with coil assemblies 018F7681, -82, -83 -86, -87, -88, -89, -91, -92, -93, -94, -95, -96, -97, -98, -99 or 018F4100, -01, -02, -03, -04, -05, -06, -07, -08, -09, -10, -11, -12, -13, -14, -15, -16, -17, -18, -19, -20, -21, -22, -23, -24, -25, -26, -27, -28, -29.

General-purpose valve, Model(s): EV220B followed by 6, 10, 12, 14, 15, 18, 20, 22, 25, 32, 40 or 50, followed by B, BE or SS, followed by N12, N14, N34, N38, N1, N114, N112 or N2, followed by E or F, followed by NC or NO, followed by ULC, with coil assemblies 018F7681, -82, -83 -86, -87, -88, -89, -91, -92, -93, -94, -95, -96, -97, -98, -99 or 018F4100, -01, -02, -03, -04, -05, -06, -07, -08, -09, -10, -11, -12, -13, -14, -15, -16, -17, -18, -19, -20, -21, -22, -23, -24, -25, -26, -27, -28, -29.

General-purpose valve, Model(s): EV220BW followed by 15, 18, 20, 22, 25, 32, 40 or 50, followed by B, BE or SS, followed by N12, N14, N34, N38, N1, N114, N112 or N2, followed by E or F, followed by NC or NO, followed by ULC, with coil assemblies 018F7681, -82, -83 -86, -87, -88, -89, -91, -92, -93, -94, -95, -96, -97, -98, -99 or 018F4100, -01, -02, -03, -04, -05, -06, -07, -08, -09, -10, -11, -12, -13, -14, -15, -16, -17, -18, -19, -20, -21, -22, -23, -24, -25, -26, -27, -28, -29.

General-purpose valve, Model(s): EV221BW followed by 6, 10, 12, 14, 15, 18, 20 or 22, followed by B, BE or SS, followed by N12, N14, N34, N38, N1, N114, N112 or N2, followed by E or F, followed by NC or NO, followed by ULC, with coil assemblies 018F7681, -82, -83 -86, -87, -88, -89, -91, -92, -93, -94, -95, -96, -97, -98, -99 or 018F4100, -01, -02, -03, -04, -05, -06, -07, -08, -09, -10, -11, -12, -13, -14, -15, -16, -17, -18, -19, -20, -21, -22, -23, -24, -25, -26, -27, -28, -29.

General-purpose valve, Model(s): EV250B followed by 10, -12, -18 or -22, followed by BD or BE, followed by N, followed by 38, 12, 34 or 1, followed by E or F, followed by NC or NO, followed by 000, with coil assemblies, Part Nos. 018Z7611, -12, -13, -21, -22, -23 or 018F7686, -87, -88, -89, -94, -95, -96, -97, -98, -99 or 018F4100, -01, -02, -03, -04, -05, -06, -07, -08, -09, -10, -11, -12, -13, -14, -15, -16, -17, -18, -19, -20, -21, -22, -23, -24, -25, -26, -27, -28, -29.

General-purpose valve, Model(s): EVRH6, followed by NO, followed by 032G, , followed by any 4 digit number, with coil assembly Part Nos. 018F4100, -01, -02, -03, -04, -05, -06, -07, -08, -09, -10, -11, -12, -13, -14, -15, -16, -17, -18, -19, -20, -21, -22, -23, -24, -25, 26, -27, -28, -29, -30, -31, -32, -33, -34, or -35, and 018F4701.

General-purpose valve, Model(s): EVRH8 followed by 032G, followed by any 4 digit number, with coil assembly Part Nos. 018F4100, -01, -02, -03, -04, -05, -06, -07, -08, -09, -10, -11, -12, -13, -14, -15, -16, -17, -18, -19, -20, -21, -22, -23, -24, -25, 26, -27, -28, -29, -30, -31, -32, -33, -34, or -35, and 018F4701.

General-purpose valve, Model(s): EVT followed by 1.2, 2.0 or 3.0 , followed by NC, followed by 068F0600, -01, -11, -20, -21 or -22, with coil assembly part nos. 018F4180 or -81.

General-purpose valve, "EV215B", Model(s): EV215B followed by 3, followed by BD, BE or SS, followed by N, followed by 14, followed by T, followed by NC, may be followed by ULC, with coil assemblies 018F7686, -87, -88, -96, -97, -98 or 018F4100, -01, -02, -03, -04, -05, -06, -07, -08, -09, -10, -11, -12, -13, -14, -15, -16, -17, -18, -19, -20, -21, -22, -23, -24, -25, -26, -27, -28, -29.

General-purpose valve, "EV225B", Model(s): EV225B followed by 6, 10, 15, 20 or 25, followed by BD or BE, followed by N, followed by 1, 12, 14, 34 or 38, followed by T, followed by NC, may be followed ULC, with coil assemblies 018F7686, -87, -88, -96, -97, -98 or 018F4100, -01, -02, -03, -04, -05, -06, -07, -08, -09, -10, -11, -12, -13, -14, -15, -16, -17, -18, -19, -20, -21, -22, -23, -24, -25, -26, -27, -28, -29.

Last Updated on 2023-07-25

The appearance of a company's name or product in this database does not in itself assure that products so identified have been manufactured under UL Solutions' Follow - Up Service. Only those products bearing the UL Mark should be considered to be Certified and covered under UL Solutions' Follow - Up Service. Always look for the Mark on the product.

UL Solutions permits the reproduction of the material contained in Product iQ subject to the following conditions: 1. The Guide Information, Assemblies, Constructions, Designs, Systems, and/or Certifications (files) must be presented in their entirety and in a non-misleading manner, without any manipulation of the data (or drawings). 2. The statement "Reprinted from Product iQ with permission from UL Solutions" must appear adjacent to the extracted material. In addition, the reprinted material must include a copyright notice in the following format: "©2023 UL LLC."

Note: We are enhancing our systems and you may notice duplicate entries/missing/outdated data. During this interim period, please contact our Customer Service at <https://www.ul.com/about/locations>.

Valves, Electrically Operated - Component

COMPANY

DANFOSS A/S

Bldg E14s1a
Nordborgvej 81
6430 Nordborg
Nordborg, Syddanmark 6430 Denmark

MH7648

Marking: Company name and model designation.

Note: For additional marking information, refer to the [Guide Information Page](#).

Electrically Operated Valves, Model(s): EVR10 followed by NC, with or without M, followed by 032F, followed by any 4 digit number, with coil assembly Part No. 018F7641.

Electrically Operated Valves, Model(s): EVR15 followed by NC, followed by 032F, followed by any 4 digit number, with coil assembly Part Nos. 018F7654, -55, -58, -60, -61, -62, -63, -64 or -65, and Part No. 018F4139.

Electrically Operated Valves, Model(s): EVR15 followed by NO, followed by 032F or 032L, followed by any 4 digit number, with coil assembly Part Nos. 018F7654, -55, -58, -60, -61, -62, -63, -64 or -65, and Part No. 018F4139.

Electrically Operated Valves, Model(s): EVR18 followed by NC, with or without M, followed by 032F, followed by any 4 digit number, with coil assembly Part No. 018F7641.

Electrically Operated Valves, Model(s): EVR2 followed by NC, followed by 032F, followed by any 4 digit number, with coil assembly Part Nos. 018F7654, -55, -58, -60, -61, -62, -63, -64 or -65, and Part No. 018F4139.

Electrically Operated Valves, Model(s): EVR20 followed by NC, with or without M, followed by 032F, followed by any 4 digit number, with coil assembly Part No. 018F7641.

Electrically Operated Valves, Model(s): EVR22 followed by NC, followed by 032F, followed by any 4 digit number, with coil assembly Part Nos. 018F7654, -55, -58, -60, -61, -62, -63, -64 or -65, and Part No. 018F4139.

Electrically Operated Valves, Model(s): EVR22 followed by NO, followed by 032F or 032L, followed by any 4 digit number, with coil assembly Part Nos. 018F7654, -55, -58, -60, -61, -62, -63, -64 or -65, and Part No. 018F4139.

Electrically Operated Valves, Model(s): EVR25 followed by NC, with or without M, followed by 032F, followed by any 4 digit number, with coil assembly Part No. 018F7641.

Electrically Operated Valves, Model(s): EVR3 followed by NO, followed by 032F, followed by any 4 digit number, with coil assembly Part Nos. 018F7654, -55, -58, -60, -61, -62, -63, -64 or -65, and Part No. 018F4139.

Electrically Operated Valves, Model(s): EVR32 followed by NO, followed by 032L or 042H, followed by any 4 digit number, with coil assembly Part Nos. 018F7654, -55, -58, -60, -61, -62, -63, -64 or -65, and Part No. 018F4139.

Electrically Operated Valves, Model(s): EVR32 followed by NC, followed by 042H, followed by any 4 digit number, with coil assembly Part Nos. 018F7654, -55, -58, -60, -61, -62, -63, -64 or -65, and Part No. 018F4139.

Electrically Operated Valves, Model(s): EVR4 followed by NC, followed by 032F, followed by any 4 digit number, with coil assembly Part Nos. 018F7654, -55, -58, -60, -61, -62, -63, -64 or -65, and Part No. 018F4139.

Electrically Operated Valves, Model(s): EVR4 followed by NO, followed by 032F or 032L, followed by any 4 digit number, with coil assembly Part Nos. 018F7654, -55, -58, -60, -61, -62, -63, -64 or -65, and Part No. 018F4139.

Electrically Operated Valves, Model(s): EVR4.2 followed by NC, followed by 032F, followed by any 4 digit number, with coil assembly Part Nos. 018F7654, -55, -58, -60, -61, -62, -63, -64 or -65, and Part No. 018F4139.

Electrically Operated Valves, Model(s): EVR40 followed by NC, with or without M, followed by 032L, followed by any 4 digit number, with coil assembly Part Nos. 018F7654, -55, -58, -60, -61, -62, -63, -64 or -65, and Part No. 018F4139.

Electrically Operated Valves, Model(s): EVR40 followed by NO, followed by 032L or 042H, followed by any 4 digit number, with coil assembly Part Nos. 018F7654, -55, -58, -60, -61, -62, -63, -64 or -65, and Part No. 018F4139.

Electrically Operated Valves, Model(s): EVR6 followed by NC, with or without M, followed by 032F, followed by any 4 digit number, with coil assembly Part No. 018F7641.

Electrically Operated Valves, Model(s): EVR6 followed by NO, followed by 032F or 032L, followed by any 4 digit number, with coil assembly Part Nos. 018F7654, -55, -58, -60, -61, -62, -63, -64 or -65, and Part No. 018F4139.

Electrically Operated Valves, Model(s): EVR8 followed by NC, followed by 032F, followed by any 4 digit number, with coil assembly Part Nos. 018F7654, -55, -58, -60, -61, -62, -63, -64 or -65, and Part No. 018F4139.

Electrically Operated Valves, Model(s): EVR8 followed by NO, followed by 032F or 032L, followed by any 4 digit number, with coil assembly Part Nos. 018F7654, -55, -58, -60, -61, -62, -63, -64 or -65, and Part No. 018F4139.

Electrically Operated Valves, Model(s): EVRH10 followed by NO, followed by 032G, followed by any 4 digit number, with coil assembly Part Nos. 018F7654, -55, -58, -60, -61, -62, -63, -64 or -65, and Part No. 018F4139.

Electrically Operated Valves, Model(s): EVRH15 followed by NO, followed by 032G, followed by any 4 digit number, with coil assembly Part Nos. 018F7654, -55, -58, -60, -61, -62, -63, -64 or -65, and Part No. 018F4139.

Electrically Operated Valves, Model(s): EVRH25 followed by NO, followed by 032G, followed by any 4 digit number, with coil assembly Part Nos. 018F7654, -55, -58, -60, -61, -62, -63, -64 or -65, and Part No. 018F4139.

Electrically Operated Valves, Model(s): EVRH32 followed by NO, followed by 032G, followed by any 4 digit number, with coil assembly Part Nos. 018F7654, -55, -58, -60, -61, -62, -63, -64 or -65, and Part No. 018F4139.

Electrically Operated Valves, Model(s): EVRH40 followed by NO, followed by 032G, followed by any 4 digit number, with coil assembly Part Nos. 018F7654, -55, -58, -60, -61, -62, -63, -64 or -65, and Part No. 018F4139.

Electrically Operated Valves, Model(s): EVRH6 followed by NO, followed by 032G, followed by any 4 digit number, with coil assembly Part Nos. 018F7654, -55, -58, -60, -61, -62, -63, -64 or -65, and Part No. 018F4139.

Electrically Operated Valves, Model(s): Type EV310A followed by 1.2, 1.5 or 2.0, followed by B or S, followed by G14 or G18, followed by F, followed by NC or NO, followed by 000, with Coil Assembly Part Nos. 042N1191, -92, and -93, or 042N4291, -92 and -93.

Electrically Operated Valves, "EVR", Model(s): EVR10 followed by NC, with or without M, followed by 032L, followed by any 4 digit number, with coil assembly Part Nos. 018F7654, -55, -58, -60, -61, -62, -63, -64 or -65, and Part No. 018F4139.

Electrically Operated Valves, "EVR", Model(s): EVR15 followed by NC, with or without M, followed by 032L, followed by any 4 digit number, with coil assembly Part Nos. 018F7654, -55, -58, -60, -61, -62, -63, -64 or -65, and Part No. 018F4139.

Electrically Operated Valves, "EVR", Model(s): EVR18 followed by NC, with or without M, followed by 032L, followed by any 4 digit number, with coil assembly Part Nos. 018F7654, -55, -58, -60, -61, -62, -63, -64 or -65, and Part No. 018F4139.

Electrically Operated Valves, "EVR", Model(s): EVR2 followed by NO, followed by 032F, followed by any 4 digit number, with coil assembly Part Nos. 018F7654, -55, -58, -60, -61, -62, -63, -64 or -65, and Part No. 018F4139.

Electrically Operated Valves, "EVR", Model(s): EVR20 followed by NC, with or without M, followed by 032L, followed by any 4 digit number, with coil assembly Part Nos. 018F7654, -55, -58, -60, -61, -62, -63, -64 or -65, and Part No. 018F4139.

Electrically Operated Valves, "EVR", Model(s): EVR22 followed by NC, with or without M, followed by 032L, followed by any 4 digit number, with coil assembly Part Nos. 018F7654, -55, -58, -60, -61, -62, -63, -64 or -65, and Part No. 018F4139.

Electrically Operated Valves, "EVR", Model(s): EVR25 followed by NC, with or without M, followed by 032L, followed by any 4 digit number, with coil assembly Part Nos. 018F7654, -55, -58, -60, -61, -62, -63, -64 or -65, and Part No. 018F4139.

Electrically Operated Valves, "EVR", Model(s): EVR3 followed by NC, with or without M, followed by 032F, followed by any 4 digit number, with coil assembly Part No. 018F7641.

Electrically Operated Valves, "EVR", Model(s): EVR32 followed by NC, with or without M, followed by 032F, followed by any 4 digit number, with coil assembly Part No. 018F7641.

Electrically Operated Valves, "EVR", Model(s): EVRH8 followed by NC, followed by 032G, followed by any 4 digit number, with coil assembly Part Nos. 018F7654, -55, -58, -60, -61, -62, -63, -64 or -65, and Part No. 018F4139.

General Purpose Valve, Model(s): EV220A25B followed by G, followed by 1, followed by E, followed by NC, followed by 000, with Coil Assembly Part Nos. 042N1191, -92 and -93 or 042N4291, -92 and -93.

General Purpose Valve, Model(s): EV220W10B followed by N or G, followed by 12 or 38, followed by N, E or F, followed by NC or NO, followed by 000, with Coil Assembly Part Nos. 042N4201, -02 and -03 and 042N7601, -08, -12, -16, -17, -91, -92 and -93.

General Purpose Valve, Model(s): EV220W12B followed by N or G, followed by 12, followed by N, E or F, followed by NC or NO, followed by 000, with Coil Assembly Part Nos. 042N4201, -02 and -03 and 042N7601, -08, -12, -16, -17, -91, -92 and -93.

General Purpose Valve, Model(s): EV220W14B followed by N or G, followed by 12, followed by N, E or F, followed by NC or NO, followed by 000, with Coil Assembly Part Nos. 042N4201, -02 and -03 and 042N7601, -08, -12, -16, -17, -91, -92 and -93.

General Purpose Valve, Model(s): EV220W14B MIX with Coil Assembly Part Nos. 042N4201, -02 and -03 and 042N7601, -08, -12, -16, -17, -91, -92, and -93.

General Purpose Valve, Model(s): EV220W18B followed by N or G, followed by 34, followed by N, E or F, followed by NC or NO, followed by 000, with Coil Assembly Part Nos. 042N4201, -02 and -03 and 042N7601, -08, -12, -16, -17, -91, -92 and -93.

General Purpose Valve, Model(s): EV220W22 followed by N or G, followed by 1, followed by N, E or F, followed by NC or NO, followed by 000, with Coil Assembly Part Nos. 042N4201, -02 and -03 and 042N7601, -08, -12, -16, -17, -91, -92 and -93.

General Purpose Valve, Model(s): EV220W25B followed by N or G, followed by 1, followed by E, followed by NC or NO, followed by 000, with Coil Assembly Part Nos. 042N4201, -02 and -03 and 042N7601, -08, -12, -16, -17, -91, -92 and -93.

General Purpose Valve, Model(s): EV220W32B followed by N or G, followed by 114, followed by N, E or F, followed by NC or NO, followed by 000, with Coil Assembly Part Nos. 042N4201, -02 and -03 and 042N7601, -08, -12, -16, -17, -91, -92 and -93.

General Purpose Valve, Model(s): EV220W40B followed by N or G, followed by 112, followed by N, E or F, followed by NC or NO, followed by 000, with Coil Assembly Part Nos. 042N4201, -02 and -03 and 042N7601, -08, -12, -16, -17, -91, -92 and -93.

General Purpose Valve, Model(s): EV220W50B followed by N or G, followed by 2, followed by N, E or F, followed by NC or NO, followed by 000, with Coil Assembly Part Nos. 042N4201, -02 and -03 and 042N7601, -08, -12, -91, -92 and -93.

General Purpose Valve, Model(s): EV220W6B followed by N or G, followed by 14 or 38, followed by N, E or F, followed by NC or NO, followed by 000, with Coil Assembly Part Nos. 042N4201, -02 and -03 and 042N7601, -08, -12, -16, -17, -91, -92 and -93.

General Purpose Valve, Model(s): Types EVR6 followed by NC, with or without M, followed by 032F or 032L, followed by any 4 digit number, with coil assembly Part Nos. 018F4100, -01, -02, -03, -04, -05, -06, -07, -08, -09, -10, -11, -12, -13, -14, -15, -16, -17, -18, -19, -20, -21, -22, -23, -24, -25, 26, -27, -28, -29, -30, -31, -32, -33, -34, or -35.

General purpose valves, Model(s): EV220A12B

General purpose valves, Model(s): EV210A with Coil PN: 042N1191, 042N1192, 042N1193, 042N4204, 042N4205, 042N4206, 042N4208, 042N4209 or 042N4210.

General purpose valves, Model(s): EV220A10B followed by N or G, followed by 12 or 38, followed by E, F or N, followed by NC or NO, followed by 000, with Coil Assembly Part Nos. 042N1191, -92 and -93 or 042N4291, -92 and -93

General purpose valves, Model(s): EV220A14B followed by N or G, followed by 12, followed by E, F or N, followed by NC or NO, followed by 000, with Coil Assembly Part Nos. 042N1191, -92 and -93 or 042N4291, -92 and -93

General purpose valves, Model(s): EV220A14B MIX with Coil Assembly Part Nos. 042N1191, -92 and -93 or 042N4291, -92 and -93

General purpose valves, Model(s): EV220A18B followed by N or G, followed by 34, followed by E, F or N, followed by NC or NO, followed by 000, with Coil Assembly Part Nos. 042N1191, -92 and -93 or 042N4291, -92 and -93

General purpose valves, Model(s): EV220A22B followed by N or G, followed by 1, followed by E, F or N, followed by NC or NO, followed by 000, with Coil Assembly Part Nos. 042N1191, -92 and -93 or 042N4291, -92 and -93

General purpose valves, Model(s): EV220A6B followed by N or G, followed by 14 or 38, followed by E, F or N, followed by NC or NO, followed by 000, with Coil Assembly Part Nos. 042N1191, -92 and -93 or 042N4291, -92 and -93.

General purpose valves, Model(s): EV220T followed by 14 or 18, followed by P, followed by GEH, GE34, GHTH, GHTH34, GHTNP, NESH or NES34, followed by E, followed by NC, may be followed by URC, with coil assembly Part Nos. 042N4291, -92 or -93 coil assembly part nos. 042N4201, -02 or -03 or coil assembly part nos. 042N7601, -08, -12, -16, -17, -91, -92 or -93..

General purpose valves, Model(s): EV310A followed by 1.2, 1.5 or 2.0, followed by B or S, followed by G14 or G18, followed by F, followed by NC or NO, followed by 000, with Coil PN: 042N1191, 042N1192 or 042N1193

General purpose valves, Model(s): EVR10 followed by NC, followed by 032F, followed by any 4 digit number, with coil assembly Part Nos. 018F7654, -55, -58, -60, -61, -62, -63, -64 or -65, and Part No. 018F4139.

General purpose valves, Model(s): EVR18 followed by NC, followed by 032F, followed by any 4 digit number, with coil assembly Part Nos. 018F7654, -55, -58, -60, -61, -62, -63, -64 or -65, and Part No. 018F4139.

General purpose valves, Model(s): EVR20 followed by NC, followed by 032F, followed by any 4 digit number, with coil assembly Part Nos. 018F7654, -55, -58, -60, -61, -62, -63, -64 or -65, and Part No. 018F4139.

General purpose valves, Model(s): EVR25 followed by NC, followed by 032F, followed by any 4 digit number, with coil assembly Part Nos. 018F7654, -55, -58, -60, -61, -62, -63, -64 or -65, and Part No. 018F4139.

General purpose valves, Model(s): EVR3 followed by NC, followed by 032F, followed by any 4 digit number, with coil assembly Part Nos. 018F7654, -55, -58, -60, -61, -62, -63, -64 or -65, and Part No. 018F4139.

General purpose valves, Model(s): EVR32 followed by NC, with or without M, followed by 032L, followed by any 4 digit number, with coil assembly Part Nos. 018F7654, -55, -58, -60, -61, -62, -63, -64 or -65, and Part No. 018F4139.

General purpose valves, Model(s): EVR6 followed by NC, followed by 032F, followed by any 4 digit number, with coil assembly Part Nos. 018F7654, -55, -58, -60, -61, -62, -63, -64 or -65, and Part No. 018F4139.

General purpose valves, Model(s): EVRB followed by F4086, with Coil Assembly Part Nos. 018F4100, -02, -10, -12, -20 and -22

General purpose valves, Model(s): EVRB 032F620, with Coil Assembly PN: 018F7654

General purpose valves, Model(s): EVRC10 followed by NC, followed by 032F or 032L, followed by any 4 digit number, with coil assembly Part Nos. 018F7654, -55, -58, -60, -61, -62, -63, -64 or -65, and Part No. 018F4139.

General purpose valves, Model(s): EVRC15 followed by NC, followed by 032F or 032L, followed by any 4 digit number, with coil assembly Part Nos. 018F7654, -55, -58, -60, -61, -62, -63, -64 or -65, and Part No. 018F4139.

General purpose valves, Model(s): EVRC20 followed by NC, followed by 032F or 032L, followed by any 4 digit number, with coil assembly Part Nos. 018F7654, -55, -58, -60, -61, -62, -63, -64 or -65, and Part No. 018F4139.

General purpose valves, Model(s): EVRF followed by F1937, with Coil Assembly Part Nos. 018F4113 and -22

General purpose valves, Model(s): EVRF F3045 with Coil Assembly Part Nos. 018F4100, -02, -10, -12, -20 and -22

General purpose valves, Model(s): EVRF F3046 with Coil Assembly Part Nos. 018F4100, -02, -10, -12, -20 and -22

General purpose valves, Model(s): EVRF F3047 with Coil Assembly Part Nos. 018F4100, -02, -10, -12, -20 and -22

General purpose valves, Model(s): EVRF F3048 with Coil Assembly Part Nos. 018F4100, -02, -10, -12, -20 and -22

General purpose valves, Model(s): EVRF F3051 with Coil Assembly Part Nos. 018F4100, -02, -10, -12, -20 and -22

General purpose valves, Model(s): EVRF F3284 with Coil Assembly Part Nos. 018F4100, -02, -10, -12, -20 and -22

General purpose valves, Model(s): EVRF F4047 with Coil Assembly Part Nos. 018F4100, -02, -10, -12, -20 and -22

General purpose valves, Model(s): EVRF-3W followed by F3134, F3136, F3139, F3141 or F3144, with Coil Enclosure PN: 018Z7511, 018Z7512, 018Z7513, 018Z7521, 018Z7522 or 018Z7523.

General purpose valves, Model(s): EVU1 with Coil Assembly PN: 042N4201, 042N4202, 042N4203, 042N4211, 042N4212, 042N4213, 042N4214, 042N4215, 042N4221, 042N4222, 042N4223, 042N4224, 042N4225, 042N4230, 042N4231, 042N4232, 042N4233, 042N4234, 042N4235, 042N4236, 042N4237, 042N4238, 042N7601, 042N7608 or 042N7612.

General purpose valves, Model(s): EVU2 with Coil Assembly PN: 042N4201, 042N4202, 042N4203, 042N4211, 042N4212, 042N4213, 042N4214, 042N4215, 042N4221, 042N4222, 042N4223, 042N4224, 042N4225, 042N4230, 042N4231, 042N4232, 042N4233, 042N4234, 042N4235, 042N4236, 042N4237, 042N4238, 042N7601, 042N7608 or 042N7612.

General purpose valves, Model(s): EVU3 with Coil Assembly PN: 042N4201, 042N4202, 042N4203, 042N4211, 042N4212, 042N4213, 042N4214, 042N4215, 042N4221, 042N4222, 042N4223, 042N4224, 042N4225, 042N4230, 042N4231, 042N4232, 042N4233, 042N4234, 042N4235, 042N4236, 042N4237, 042N4238, 042N7601, 042N7608 or 042N7612.

General purpose valves, Model(s): EVU4 with Coil Assembly PN: 042N4201, 042N4202, 042N4203, 042N4211, 042N4212, 042N4213, 042N4214, 042N4215, 042N4221, 042N4222, 042N4223, 042N4224, 042N4225, 042N4230, 042N4231, 042N4232, 042N4233, 042N4234, 042N4235, 042N4236, 042N4237, 042N4238, 042N7601, 042N7608 or 042N7612.

General purpose valves, Model(s): EVU5 with Coil Assembly PN: 042N4201, 042N4202, 042N4203, 042N4211, 042N4212, 042N4213, 042N4214, 042N4215, 042N4221, 042N4222, 042N4223, 042N4224, 042N4225, 042N4230, 042N4231, 042N4232, 042N4233, 042N4234, 042N4235, 042N4236, 042N4237, 042N4238, 042N7601, 042N7608 or 042N7612.

General purpose valves, Model(s): EVU6 with Coil Assembly PN: 042N4201, 042N4202, 042N4203, 042N4211, 042N4212, 042N4213, 042N4214, 042N4215, 042N4221, 042N4222, 042N4223, 042N4224, 042N4225, 042N4230, 042N4231, 042N4232, 042N4233, 042N4234, 042N4235, 042N4236, 042N4237, 042N4238, 042N7601, 042N7608 or 042N7612.

General purpose valves, Model(s): EVU8 with Coil Assembly PN: 042N4201, 042N4202, 042N4203, 042N4211, 042N4212, 042N4213, 042N4214, 042N4215, 042N4221, 042N4222, 042N4223, 042N4224, 042N4225, 042N4230, 042N4231, 042N4232, 042N4233, 042N4234, 042N4235, 042N4236, 042N4237, 042N4238, 042N7601, 042N7608 or 042N7612.

General purpose valves, Model(s): EVUB1 with Coil Assembly PN: 042N4201, 042N4202, 042N4203, 042N4211, 042N4212, 042N4213, 042N4214, 042N4215, 042N4221, 042N4222, 042N4223, 042N4224, 042N4225, 042N4230, 042N4231, 042N4232, 042N4233, 042N4234, 042N4235, 042N4236, 042N4237, 042N4238, 042N7601, 042N7608 or 042N7612.

General purpose valves, Model(s): EVUF2 with Coil Assembly PN: 042N4201, 042N4202, 042N4203, 042N4211, 042N4212, 042N4213, 042N4214, 042N4215, 042N4221, 042N4222, 042N4223, 042N4224, 042N4225, 042N4230, 042N4231, 042N4232, 042N4233, 042N4234, 042N4235, 042N4236, 042N4237, 042N4238, 042N7601, 042N7608 or 042N7612.

General purpose valves, Model(s): EVUL1 with Coil Assembly PN: 042N4201, 042N4202, 042N4203, 042N4211, 042N4212, 042N4213, 042N4214, 042N4215, 042N4221, 042N4222, 042N4223, 042N4224, 042N4225, 042N4230, 042N4231, 042N4232, 042N4233, 042N4234, 042N4235, 042N4236, 042N4237, 042N4238, 042N7601, 042N7608 or 042N7612.

General purpose valves, Model(s): EVUL2 with Coil Assembly PN: 042N4201, 042N4202, 042N4203, 042N4211, 042N4212, 042N4213, 042N4214, 042N4215, 042N4221, 042N4222, 042N4223, 042N4224, 042N4225, 042N4230, 042N4231, 042N4232, 042N4233, 042N4234, 042N4235, 042N4236, 042N4237, 042N4238, 042N7601, 042N7608 or 042N7612.

General purpose valves, Model(s): EVUL3 with Coil Assembly PN: 042N4201, 042N4202, 042N4203, 042N4211, 042N4212, 042N4213, 042N4214, 042N4215, 042N4221, 042N4222, 042N4223, 042N4224, 042N4225, 042N4230, 042N4231, 042N4232, 042N4233, 042N4234, 042N4235, 042N4236, 042N4237, 042N4238, 042N7601, 042N7608 or 042N7612.

General purpose valves, Model(s): EVUL4 with Coil Assembly PN: 042N4201, 042N4202, 042N4203, 042N4211, 042N4212, 042N4213, 042N4214, 042N4215, 042N4221, 042N4222, 042N4223, 042N4224, 042N4225, 042N4230, 042N4231, 042N4232, 042N4233, 042N4234, 042N4235, 042N4236, 042N4237, 042N4238, 042N7601, 042N7608 or 042N7612.

General purpose valves, Model(s): EVUL5 with Coil Assembly PN: 042N4201, 042N4202, 042N4203, 042N4211, 042N4212, 042N4213, 042N4214, 042N4215, 042N4221, 042N4222, 042N4223, 042N4224, 042N4225, 042N4230, 042N4231, 042N4232, 042N4233, 042N4234, 042N4235, 042N4236, 042N4237, 042N4238, 042N7601, 042N7608 or 042N7612.

General purpose valves, Model(s): EVUL6 with Coil Assembly PN: 042N4201, 042N4202, 042N4203, 042N4211, 042N4212, 042N4213, 042N4214, 042N4215, 042N4221, 042N4222, 042N4223, 042N4224, 042N4225, 042N4230, 042N4231, 042N4232, 042N4233, 042N4234, 042N4235, 042N4236, 042N4237, 042N4238, 042N7601, 042N7608 or 042N7612.

General purpose valves, Model(s): Type EVRF followed by 032F6351, with coil assembly Part No. 018F4113

General purpose valves, Model(s): Types EVRA followed by 1.5 F3006 or 3.5 F3007 with coil assembly Part Nos. 018F7654, -55, -58, -60, -61, -62, 63, -64 or -65 Part Nos. 018F4100, -02, -03, -04, -10, -12, -13, -14, -15, -20, -22, -23, -30, -31, -32, -33, -34, -35 or -39 and Part Nos. 018F6968, 018F8044, 018F8045 or 018F8393

General purpose valves, Model(s): VDHT followed by 3/8, 1/2, 3/4 or 1, followed by E, EA or ED, followed by NC or NO, with or without an eight-digit customer number.

General purpose valves, Model(s): VDHT followed by 15, followed by E, followed by 3/2, followed by NC, followed by NO, with or without an eight-digit number

General purpose valves, Model(s): VDHT followed by B2, B3, B4, BL2, BL2S or BL3, followed by 1/2, 3/4 or 1, followed by -1/2 or -3/4, followed by NC, NC/NO or NO, with or without an eight-digit customer number

General-purpose valve, Model(s): ETS 6 - 10, ETS 6 - 10, ETS 6 - 14, ETS 6 - 14, ETS 6 - 18, ETS 6 - 18, ETS 6 - 25, ETS 6 - 25, ETS 6 - 30, ETS 6 - 30, ETS 6 - 32, ETS 6 - 32, ETS 6 - 40, ETS 6 - 40

General-purpose valve, Model(s): 034G88 followed by 00, 01, 02, 03, 04, 05, 06, 07, 08, 09, 10 or 11, followed by ETS 8M, followed by 40, 45, 55 or 65, followed by L or S

General-purpose valve, Model(s): ETS followed by 12, 24, 25, 50 or 100, followed by C.

General-purpose valve, Model(s): ETS followed by 12.5, 25, 25B, 50, 100 or 400.

General-purpose valve, Model(s): ETS followed by 175, 250, 400 or 500, followed by L.

General-purpose valve, Model(s): ETS followed by 500 or 800, followed by P.

General-purpose valve, Model(s): EV210B followed by 1.5, 2 or 3, followed by B, BE or SS, followed by N18, N14 or N38, followed by E, followed by NC or NO, followed by URC, with Coil Assembly Part Nos. 018F6968, or 018F7397, or 018F7654, 55, -58, -60, -61, -62, -63, -64 and -65.

General-purpose valve, Model(s): EV210B followed by 1.5, 2 or 3, followed by B, BE or SS, followed by G18, G14 or G38, followed by E, followed by NC or NO, followed by URC, with Coil Assembly Part Nos. 018F6968, or 018F7397, or 018F7654, 55, -58, -60, -61, -62, -63, -64 and -65, or 018F7681, -82, -83 -86, -87, -88, -89, -91, -92, -93, -94, -95, -96, -97, -98 and -99.

General-purpose valve, Model(s): EV210BW followed by 1.5, 2 or 3, followed by B, BE or SS, followed by N18, N14 or N38, followed by E, followed by NC or NO, followed by URC, with Coil Assembly Part Nos. 018F6968, or 018F7397, or 018F7654, 55, -58, -60, -61, -62, -63, -64 and -65.

General-purpose valve, Model(s): EV210BW followed by 1.5, 2 or 3, followed by B, BE or SS, followed by G18, G14 or G38, followed by E, followed by NC or NO, followed by URC, with Coil Assembly Part Nos. 018F6968, or 018F7397, or 018F7654, 55, -58, -60, -61, -62, -63, -64 and -65, or 018F7681, -82, -83 -86, -87, -88, -89, -91, -92, -93, -94, -95, -96, -97, -98 and -99.

General-purpose valve, Model(s): EV215B followed by 3, followed by BD, BE or SS, followed by N or G, followed by 14, followed by T, followed by NC, may be followed by URC, with Coil Assembly Part Nos. 018F4511, -17 and -19 or 018F6968 or 018F7655, -58 and -63.

General-purpose valve, Model(s): EV220B followed by 6, 10, 12, 14, 15, 18, 20, 22, 25, 32, 40 or 50, followed by B, BE or SS, followed by N14, N38, N12, N34, N1, N114, N112 or N2, followed by E, followed by NC or NO, followed by URC, with Coil Assembly Part Nos. 018F6968, or 018F7654, 55, -58, -60, -61, -62, -63, -64 and -65.

General-purpose valve, Model(s): EV220B followed by 6, 10, 12, 14, 15, 18, 20, 22, 25, 32, 40 or 50, followed by B, BE or SS, followed by G14, G38, G12, G34, G1, G114, G112 or G2, followed by E, followed by NC or NO, followed by URC, with Coil Assembly Part Nos. 018F6968, or 018F7654, 55, -58, -60, -61, -62, -63, -64 and -65, or 018F7681, -82, -83 -86, -87, -88, -89, -91, -92, -93, -94, -95, -96, -97, -98 and -99.

General-purpose valve, Model(s): EV220BW followed by 15, 18, 20, 22, 25, 32, 40 or 50, followed by B, BE or SS, followed by N14, N38, N12, N34, N1, N114, N112 or N2, followed by E, followed by NC or NO, followed by URC, with Coil Assembly Part Nos. 018F6968, or 018F7654, 55, -58, -60, -61, -62, -63, -64 and -65.

General-purpose valve, Model(s): EV220BW followed by 15, 18, 20, 22, 25, 32, 40 or 50, followed by B, BE or SS, followed by G14, G38, G12, G34, G1, G114, G112 or G2, followed by E, followed by NC or NO, followed by URC, with Coil Assembly Part Nos. 018F6968, or 018F7654, 55, -58, -60, -61, -62, -63, -64 and -65, or 018F7681, -82, -83 -86, -87, -88, -89, -91, -92, -93, -94, -95, -96, -97, -98 and -99.

General-purpose valve, Model(s): EV220S10B followed by G, followed by 14 or 38, followed by E or F, followed by NC or NO, followed by 000 or 104, with Coil Assembly Part Nos. 042N4201, -02 and -03, and 042N7601, -08, -12, -16, -17, -91, -92 and -93.

General-purpose valve, Model(s): EV220S13B followed G, followed by 12, followed by E or F, followed by NC or NO, followed by 000 or 104, with Coil Assembly Part Nos. 042N4201, -02 and -03, and 042N7601, -08, -12, -16, -17, -91, -92 and -93.

General-purpose valve, Model(s): EV220S14B followed by G, followed by 12, followed by E or F, followed by NC or NO, followed by 000 or 104, with Coil Assembly Part Nos. 042N4201, -02 and -03, and 042N7601, -08, -12, -16, -17, -91, -92 and -93.

General-purpose valve, Model(s): EV220S17B followed by G, followed by 34, followed by E or F, followed by NC or NO, followed by 000 or 104, with Coil Assembly Part Nos. 042N4201, -02 and -03, and 042N7601, -08, -12, -16, -17, -91, -92 and -93.

General-purpose valve, Model(s): EV220S22B followed by G, followed by 1, followed by E or F, followed by NC or NO, followed by 000 or 104, with Coil Assembly Part Nos. 042N4201, -02 and -03, and 042N7601, -08, -12, -16, -17, -91, -92 and -93.

General-purpose valve, Model(s): EV220S25B followed by G, followed by 1, followed by E, followed by NC or NO, followed by 000 or 104, with Coil Assembly Part Nos. 042N4201, -02 and -03, and 042N7601, -08, -12, -16, -17, -91, -92 and -93.

General-purpose valve, Model(s): EV220S32B followed by G, followed by 114, followed by E or F, followed by NC or NO, followed by 000 or 104, with Coil Assembly Part Nos. 042N4201, -02 and -03, and 042N7601, -08, -12, -16, -17, -91, -92 and -93.

General-purpose valve, Model(s): EV220S40B followed by G, followed by 112, followed by E or F, followed by NC or NO, followed by 000 or 104, with Coil Assembly Part Nos. 042N4201, -02 and -03, and 042N7601, -08, -12, -16, -17, -91, -92 and -93.

General-purpose valve, Model(s): EV220S50B followed by G, followed by 2, followed by E or F, followed by NC or NO, followed by 000 or 104, with Coil Assembly Part Nos. 042N4201, -02 and -03, and 042N7601, -08, -12, -91, -92 and -93.

General-purpose valve, Model(s): EV221BW followed by 6, 10, 12, 14, 15, 18, 20 or 22, followed by B, BE or SS, followed by G14, G38, G12, G34, G1, G114, G112 or G2, followed by E, followed by NC or NO, followed by URC, with Coil Assembly Part Nos. 018F6968, or 018F7654, 55, -58, -60, -61, -62, -63, -64 and -65, or 018F7681, -82, -83 -86, -87, -88, -89, -91, -92, -93, -94, -95, -96, -97, -98 and -99.

General-purpose valve, Model(s): EV221BW followed by 6, 10, 12, 14, 15, 18, 20 or 22, followed by B, BE or SS, followed by N14, N38, N12, N34, N1, N114, N112 or N2, followed by E, followed by NC or NO, followed by URC, with Coil Assembly Part Nos. 018F6968, or 018F7654, 55, -58, -60, -61, -62, -63, -64 and -65.

General-purpose valve, Model(s): EV225B followed by 6, 10, 15, 20 or 25, followed by BD or BE, followed by N or G, followed by 1, 12, 14, 34 or 38, followed by T, followed by NC, may be followed by URC, with Coil Assembly Part Nos. 018F4511, -17 and -19 or 018F6968 or 018F7655, -58 and -63.

General-purpose valve, Model(s): EV250B followed by 10, 12, 18 or 22, followed by BD or BE, followed by G or N, followed by 38, 12, 34 or 1, followed by E or F, followed by NC or NO, followed by 000, with Coil Assembly Part Nos. 018F7397 (suffix F only), or 018F6968, or 018F7655, -58 or -63.

General-purpose valve, Model(s): EV250BW followed by 10, 12, 18 or 22, followed by BD or BE, followed by G or N, followed by 38, 12, 34 or 1, followed by E or F, followed by NC or NO, followed by 000, with Coil Assembly Part Nos. 018F7397 (suffix F only), or 018F6968, 018F7655, -58 or -63.

General-purpose valve, Model(s): EVUL8 with Coil Assembly PN: 042N4201, 042N4202, 042N4203, 042N4211, 042N4212, 042N4213, 042N4214, 042N4215, 042N4221, 042N4222, 042N4223, 042N4224, 042N4225, 042N4230, 042N4231, 042N4232, 042N4233, 042N4234, 042N4235, 042N4236, 042N4237, 042N4238, 042N7601, 042N7608 or 042N7612.

General-purpose valve, Model(s): KVS followed by 1, 2, 3 or 5, followed by C.

General-purpose valve, "CCM", Model(s): CCM followed by 10, 20, 30 or 40, followed by 027H, followed by a 4 digit number.

General-purpose valve, "CCMT w/suffix L", Model(s): CCMT followed by 3, 5, 8 or 10, followed by L, followed by 027H, followed by a 4 digit number.

General-purpose valve, "CCMT", Model(s): CCMT followed by 2, 4, 8, 16, 24, 30 or 42, followed by 027H, followed by a 4 digit number

Last Updated on 2023-06-30

The appearance of a company's name or product in this database does not in itself assure that products so identified have been manufactured under UL Solutions' Follow - Up Service. Only those products bearing the UL Mark should be considered to be Certified and covered under UL Solutions' Follow - Up Service. Always look for the Mark on the product.

UL Solutions permits the reproduction of the material contained in Product iQ subject to the following conditions: 1. The Guide Information, Assemblies, Constructions, Designs, Systems, and/or Certifications (files) must be presented in their entirety and in a non-misleading manner, without any manipulation of the data (or drawings). 2. The statement "Reprinted from Product iQ with permission from UL Solutions" must appear adjacent to the extracted material. In addition, the reprinted material must include a copyright notice in the following format: "©2023 UL LLC."

Note: We are enhancing our systems and you may notice duplicate entries/missing/outdated data. During this interim period, please contact our Customer Service at <https://www.ul.com/about/locations>.

Valves, Electrically Operated Certified for Canada

COMPANY

DANFOSS A/S

Bldg E14s1a
Nordborgvej 81
6430 Nordborg
Nordborg, Syddanmark 6430 Denmark

MH7648

General purpose valves, Model(s): AKV15 , followed by -1, -2, -3, -4, with coil enclosures 018Z7603, -7611, -7612, -7613 or 018F7681, -82, -83, -89, -91, -92, -93, -94, -95, -99.

General purpose valves, Model(s): AKVA15 , followed by -1, -2, -3, -4, with coil enclosures 018Z7603, -7611, -7612, -7613 or 018F7681, -82, -83, -89, -91, -92, -93, -94, -95, -99.

General purpose valves, Model(s): AKVA201 with assembly part nos. 018F4100, -01, -02, -03, -04, -05, -06, -07, -08, -09, -10, -11, -12, -13, -14, -15 , -16, -17, -18 , -19, -20, -21, -22, -23, -24, -25 , 26, -27, -28, -29, -30, -31, -32, -33, -34 and -35

General purpose valves, Model(s): AKVA202 with assembly part nos. 018F4100, -01, -02, -03, -04, -05, -06, -07, -08, -09, -10, -11, -12, -13, -14, -15 , -16, -17, -18 , -19, -20, -21, -22, -23, -24, -25 , 26, -27, -28, -29, -30, -31, -32, -33, -34 and -35

General purpose valves, Model(s): AKVA204 with assembly part nos. 018F4100, -01, -02, -03, -04, -05, -06, -07, -08, -09, -10, -11, -12, -13, -14, -15 , -16, -17, -18 , -19, -20, -21, -22, -23, -24, -25 , 26, -27, -28, -29, -30, -31, -32, -33, -34 and -35

General purpose valves, Model(s): AKVA205 with assembly part nos. 018F4100, -01, -02, -03, -04, -05, -06, -07, -08, -09, -10, -11, -12, -13, -14, -15 , -16, -17, -18 , -19, -20, -21, -22, -23, -24, -25 , 26, -27, -28, -29, -30, -31, -32, -33, -34 and -35

General purpose valves, with coil enclosure, Model(s): AKV201 with assembly part nos. 018F4100, -01, -02, -03, -04, -05, -06, -07, -08, -09, -10, -11, -12, -13, -14, -15 , -16, -17, -18 , -19, -20, -21, -22, -23, -24, -25 , 26, -27, -28, -29, -30, -31, -32, -33, -34 and -35

General purpose valves, with coil enclosure, Model(s): AKV202 with assembly part nos. 018F4100, -01, -02, -03, -04, -05, -06, -07, -08, -09, -10, -11, -12, -13, -14, -15 , -16, -17, -18 , -19, -20, -21, -22, -23, -24, -25 , 26, -27, -28, -29, -30, -31, -32, -33, -34 and -35

General purpose valves, with coil enclosure, Model(s): AKV203 with assembly part nos. 018F4100, -01, -02, -03, -04, -05, -06, -07, -08, -09, -10, -11, -12, -13, -14, -15, -16, -17, -18, -19, -20, -21, -22, -23, -24, -25, 26, -27, -28, -29, -30, -31, -32, -33, -34 and -35

General purpose valves, with coil enclosure, Model(s): AKV204 with assembly part nos. 018F4100, -01, -02, -03, -04, -05, -06, -07, -08, -09, -10, -11, -12, -13, -14, -15, -16, -17, -18, -19, -20, -21, -22, -23, -24, -25, 26, -27, -28, -29, -30, -31, -32, -33, -34 and -35

General purpose valves, with coil enclosure, Model(s): AKV205 with assembly part nos. 018F4100, -01, -02, -03, -04, -05, -06, -07, -08, -09, -10, -11, -12, -13, -14, -15, -16, -17, -18, -19, -20, -21, -22, -23, -24, -25, 26, -27, -28, -29, -30, -31, -32, -33, -34 and -35

General purpose valves, with coil enclosure, Model(s): AKVA203 with assembly part nos. 018F4100, -01, -02, -03, -04, -05, -06, -07, -08, -09, -10, -11, -12, -13, -14, -15, -16, -17, -18, -19, -20, -21, -22, -23, -24, -25, 26, -27, -28, -29, -30, -31, -32, -33, -34 and -35

General-purpose valve, Model(s): EV210B followed by 1.5, 2 or 3, followed by B, BE or SS, followed by N18, N14 or N38, followed by E, followed by NC or NO, followed by URC, with Coil Assembly Part Nos. 018F6968, or 018F7397, or 018F7654, 55, -58, -60, -61, -62, -63, -64 and -65.

General-purpose valve, Model(s): EV210B followed by 1.5, 2 or 3, followed by B, BE or SS, followed by G18, G14 or G38, followed by E, followed by NC or NO, followed by URC, with Coil Assembly Part Nos. 018F6968, or 018F7397, or 018F7654, 55, -58, -60, -61, -62, -63, -64 and -65, or 018F7681, -82, -83 -86, -87, -88, -89, -91, -92, -93, -94, -95, -96, -97, -98 and -99.

General-purpose valve, Model(s): EV210B followed by 1.5, 2, 3, 6 or 10, followed by B, BE or SS, followed by N14, N18, N38 or N12, followed by F, followed by NC or NO, followed by ULC, with coil assemblies 018F7681, -82, -83 -86, -87, -88, -89, -91, -92, -93, -94, -95, -96, -97, -98, -99 or 018F4100, -01, -02, -03, -04, -05, -06, -07, -08, -09, -10, -11, -12, -13, -14, -15, -16, -17, -18, -19, -20, -21, -22, -23, -24, -25, -26, -27, -28, -29.

General-purpose valve, Model(s): EV210BW followed by 1.5, 2 or 3, followed by B, BE or SS, followed by N18, N14 or N38, followed by E, followed by NC or NO, followed by URC, with Coil Assembly Part Nos. 018F6968, or 018F7397, or 018F7654, 55, -58, -60, -61, -62, -63, -64 and -65.

General-purpose valve, Model(s): EV210BW followed by 1.5, 2 or 3, followed by B, BE or SS, followed by G18, G14 or G38, followed by E, followed by NC or NO, followed by URC, with Coil Assembly Part Nos. 018F6968, or 018F7397, or 018F7654, 55, -58, -60, -61, -62, -63, -64 and -65, or 018F7681, -82, -83 -86, -87, -88, -89, -91, -92, -93, -94, -95, -96, -97, -98 and -99.

General-purpose valve, Model(s): EV210BW followed by 1.5, 2, 3, 6 or 10, followed by B, BE or SS, followed by N14, N18, N38 or N12, followed by F, followed by NC or NO, followed by ULC, with coil assemblies 018F7681, -82, -83 -86, -87, -88, -89, -91, -92, -93, -94, -95, -96, -97, -98, -99 or 018F4100, -01, -02, -03, -04, -05, -06, -07, -08, -09, -10, -11, -12, -13, -14, -15, -16, -17, -18, -19, -20, -21, -22, -23, -24, -25, -26, -27, -28, -29.

General-purpose valve, Model(s): EV220B followed by 6, 10, 12, 14, 15, 18, 20, 22, 25, 32, 40 or 50, followed by B, BE or SS, followed by N12, N14, N34, N38, N1, N114, N112 or N2, followed by E or F, followed by NC or NO, followed by ULC, with coil assemblies 018F7681, -82, -83 -86, -87, -88, -89, -91, -92, -93, -94, -95, -96, -97, -98, -99 or 018F4100, -01, -02, -03, -04, -05, -06, -07, -08, -09, -10, -11, -12, -13, -14, -15, -16, -17, -18, -19, -20, -21, -22, -23, -24, -25, -26, -27, -28, -29.

General-purpose valve, Model(s): EV220B followed by 6, 10, 12, 14, 15, 18, 20, 22, 25, 32, 40 or 50, followed by B, BE or SS, followed by N14, N38, N12, N34, N1, N114, N112 or N2, followed by E, followed by NC or NO, followed by URC, with Coil Assembly Part Nos. 018F6968, or 018F7654, 55, -58, -60, -61, -62, -63, -64 and -65.

General-purpose valve, Model(s): EV220B followed by 6, 10, 12, 14, 15, 18, 20, 22, 25, 32, 40 or 50, followed by B, BE or SS, followed by G14, G38, G12, G34, G1, G114, G112 or G2, followed by E, followed by NC or NO, followed by URC, with Coil Assembly Part Nos. 018F6968, or 018F7654, 55, -58, -60, -61, -62, -63, -64 and -65, or 018F7681, -82, -83 -86, -87, -88, -89, -91, -92, -93, -94, -95, -96, -97, -98 and -99.

General-purpose valve, Model(s): EV220BW followed by 15, 18, 20, 22, 25, 32, 40 or 50, followed by B, BE or SS, followed by N12, N14, N34, N38, N1, N114, N112 or N2, followed by E or F, followed by NC or NO, followed by ULC, with coil assemblies 018F7681, -82, -83 -86, -87, -88, -89, -91, -92, -93, -94, -95, -96, -97, -98, -99 or 018F4100, -01, -02, -03, -04, -05, -06, -07, -08, -09, -10, -11, -12, -13, -14, -15, -16, -17, -18, -19, -20, -21, -22, -23, -24, -25, -26, -27, -28, -29.

General-purpose valve, Model(s): EV220BW followed by 15, 18, 20, 22, 25, 32, 40 or 50, followed by B, BE or SS, followed by N14, N38, N12, N34, N1, N114, N112 or N2, followed by E, followed by NC or NO, followed by URC, with Coil Assembly Part Nos. 018F6968, or 018F7654, 55, -58, -60, -61, -62, -63, -64 and -65.

General-purpose valve, Model(s): EV220BW followed by 15, 18, 20, 22, 25, 32, 40 or 50, followed by B, BE or SS, followed by G14, G38 , G12, G34, G1, G114, G112 or G2, followed by E, followed by NC or NO, followed by URC, with Coil Assembly Part Nos. 018F6968, or 018F7654, 55, -58, -60, -61, -62, -63, -64 and -65, or 018F7681, -82, -83 -86, -87, -88, -89, -91, -92, -93, -94, -95, -96, -97, -98 and -99.

General-purpose valve, Model(s): EV221BW followed by 6, 10, 12, 14, 15, 18, 20 or 22, followed by B, BE or SS, followed by G14, G38 , G12, G34, G1, G114, G112 or G2, followed by E, followed by NC or NO, followed by URC, with Coil Assembly Part Nos. 018F6968, or 018F7654, 55, -58, -60, -61, -62, -63, -64 and -65, or 018F7681, -82, -83 -86, -87, -88, -89, -91, -92, -93, -94, -95, -96, -97, -98 and -99.

General-purpose valve, Model(s): EV221BW followed by 6, 10, 12, 14, 15, 18, 20 or 22, followed by B, BE or SS, followed by N14, N38, N12, N34, N1, N114, N112 or N2, followed by E, followed by NC or NO, followed by URC, with Coil Assembly Part Nos. 018F6968, or 018F7654, 55, -58, -60, -61, -62, -63, -64 and -65.

General-purpose valve, Model(s): EV221BW followed by 6, 10, 12, 14, 15, 18, 20 or 22, followed by B, BE or SS, followed by N12, N14, N34, N38, N1, N114, N112 or N2, followed by E or F, followed by NC or NO, followed by ULC, with coil assemblies 018F7681, -82, -83 -86, -87, -88, -89, -91, -92, -93, -94, -95, -96, -97, -98, -99 or 018F4100, -01, -02, -03, -04, -05, -06, -07, -08, -09, -10, -11, -12, -13, -14, -15, -16, -17, -18, -19, -20, -21, -22, -23, -24, -25, -26, -27, -28, -29.

General-purpose valve, Model(s): EV250B followed by 10, -12, -18 or -22, followed by BD or BE, followed by N, followed by 38, 12, 34 or 1, followed by E or F, followed by NC or NO, followed by 000, with coil assemblies, Part Nos. 018Z7611, -12, -13, -21, -22, -23 or 018F7686, -87, -88, -89, -94, -95, -96, -97, -98, -99 or 018F4100, -01, -02, -03, -04, -05, -06, -07, -08, -09, -10, -11, -12, -13, -14, -15, -16, -17, -18, -19, -20, -21, -22, -23, -24, -25, -26, -27, -28, -29.

General-purpose valve, Model(s): EV250BW followed by 10, -12, -18 or -22, followed by BD or BE, followed by N, followed by 38, 12, 34 or 1, followed by E or F, followed by NC or NO, followed by 000, with coil assemblies, Part Nos. 018Z7611, -12, -13, -21, -22, -23 or 018F7686, -87, -88, -89, -94, -95, -96, -97, -98, -99 or 018F4100, -01, -02, -03, -04, -05, -06, -07, -08, -09, -10, -11, -12, -13, -14, -15, -16, -17, -18, -19, -20, -21, -22, -23, -24, -25, -26, -27, -28, -29.

General-purpose valve, Model(s): EVR10 followed by NC , followed by 032F, followed by any 4 digit number, with coil assembly Part Nos. 018F4100, -01, -02, -03, -04, -05, -06, -07, -08, -09, -10, -11, -12, -13, -14, -15, -16, -17, -18, -19, -20, -21, -22, -23, -24, -25, 26, -27, -28, -29, -30, -31, -32, -33, -34, or -35, and 018F4701.

General-purpose valve, Model(s): EVR10 followed by NC, , with or without M, followed by 032L, followed by any 4 digit number, with coil assembly Part Nos. 018F4100, -01, -02, -03, -04, -05, -06, -07, -08, -09, -10, -11, -12, -13, -14, -15, -16, -17, -18, -19, -20, -21, -22, -23, -24, -25, 26, -27, -28, -29, -30, -31, -32, -33, -34, -35, -80, or -81, and 018F4701.

General-purpose valve, Model(s): EVR10, followed by NO , followed by 032F or 032L, followed by any 4 digit number, with coil assembly Part Nos. 018F4100, -01, -02, -03, -04, -05, -06, -07, -08, -09, -10, -11, -12, -13, -14, -15, -16, -17, -18, -19, -20, -21, -22, -23, -24, -25, 26, -27, -28, -29, -30, -31, -32, -33, -34, -35, -80, or -81, and 018F4701.

General-purpose valve, Model(s): EVR10NO followed by 032F, followed by any 4 digit number, with coil assembly Part Nos. 018F4100, -01, -02, -03, -04, -05, -06, -07, -08, -09, -10, -11, -12, -13, -14, -15, -16, -17, -18, -19, -20, -21, -22, -23, -24, -25, 26, -27, -28, -29, -30, -31, -32, -33, -34, or -35, and 018F4701.

General-purpose valve, Model(s): EVRH22 followed by 032G, followed by NC, followed by any 4 digit number, with coil assembly Part Nos. 018F4100, -01, -02, -03, -04, -05, -06, -07, -08, -09, -10, -11, -12, -13, -14, -15, -16, -17, -18, -19, -20, -21, -22, -23, -24, -25, 26, -27, -28, -29, -30, -31, -32, -33, -34, or -35, and 018F4701.

General-purpose valve, Model(s): EVRH25 followed by 032G, followed by NC, followed by any 4 digit number, with coil assembly Part Nos. 018F4100, -01, -02, -03, -04, -05, -06, -07, -08, -09, -10, -11, -12, -13, -14, -15, -16, -17, -18, -19, -20, -21, -22, -23, -24, -25, 26, -27, -28, -29, -30, -31, -32, -33, -34, or -35, and 018F4701.

General-purpose valve, Model(s): EVRH25, followed by NO, followed by 032G, , followed by any 4 digit number, with coil assembly Part Nos. 018F4100, -01, -02, -03, -04, -05, -06, -07, -08, -09, -10, -11, -12, -13, -14, -15, -16, -17, -18, -19, -20, -21, -22, -23, -24, -25, 26, -27, -28, -29, -30, -31, -32, -33, -34, or -35, and 018F4701.

General-purpose valve, Model(s): EVRH32, followed by NO, followed by 032G , followed by any 4 digit number, with coil assembly Part Nos. 018F4100, -01, -02, -03, -04, -05, -06, -07, -08, -09, -10, -11, -12, -13, -14, -15, -16, -17, -18, -19, -20, -21, -22, -23, -24, -25, 26, -27, -28, -29, -30, -31, -32, -33, -34, or -35, and 018F4701.

General-purpose valve, Model(s): EVRH32, followed by NO, followed by 032G, , followed by any 4 digit number, with coil assembly Part Nos. 018F4100, -01, -02, -03, -04, -05, -06, -07, -08, -09, -10, -11, -12, -13, -14, -15, -16, -17, -18, -19, -20, -21, -22, -23, -24, -25, 26, -27, -28, -29, -30, -31, -32, -33, -34, or -35, and 018F4701.

General-purpose valve, Model(s): EVRH4 followed by 032G, , followed by any 4 digit number, with coil assembly Part Nos. 018F4100, -01, -02, -03, -04, -05, -06, -07, -08, -09, -10, -11, -12, -13, -14, -15, -16, -17, -18, -19, -20, -21, -22, -23, -24, -25, 26, -27, -28, -29, -30, -31, -32, -33, -34, or -35, and 018F4701.

General-purpose valve, Model(s): EVRH40 followed by 032G, followed by NC, followed by any 4 digit number, with coil assembly Part Nos. 018F4100, -01, -02, -03, -04, -05, -06, -07, -08, -09, -10, -11, -12, -13, -14, -15, -16, -17, -18, -19, -20, -21, -22, -23, -24, -25, 26, -27, -28, -29, -30, -31, -32, -33, -34, or -35, and 018F4701.

General-purpose valve, Model(s): EVRH40, followed by NO, followed by 032G , followed by any 4 digit number, with coil assembly Part Nos. 018F4100, -01, -02, -03, -04, -05, -06, -07, -08, -09, -10, -11, -12, -13, -14, -15, -16, -17, -18, -19, -20, -21, -22, -23, -24, -25, 26, -27, -28, -29, -30, -31, -32, -33, -34, or -35, and 018F4701.

General-purpose valve, Model(s): EVRH6 followed by 032G, , followed by any 4 digit number, with coil assembly Part Nos. 018F4100, -01, -02, -03, -04, -05, -06, -07, -08, -09, -10, -11, -12, -13, -14, -15, -16, -17, -18, -19, -20, -21, -22, -23, -24, -25, 26, -27, -28, -29, -30, -31, -32, -33, -34, or -35, and 018F4701.

General-purpose valve, Model(s): EVRH6, followed by NO, followed by 032G, , followed by any 4 digit number, with coil assembly Part Nos. 018F4100, -01, -02, -03, -04, -05, -06, -07, -08, -09, -10, -11, -12, -13, -14, -15, -16, -17, -18, -19, -20, -21, -22, -23, -24, -25, 26, -27, -28, -29, -30, -31, -32, -33, -34, or -35, and 018F4701.

General-purpose valve, Model(s): EVRH8 followed by 032G, followed by any 4 digit number, with coil assembly Part Nos. 018F4100, -01, -02, -03, -04, -05, -06, -07, -08, -09, -10, -11, -12, -13, -14, -15, -16, -17, -18, -19, -20, -21, -22, -23, -24, -25, 26, -27, -28, -29, -30, -31, -32, -33, -34, or -35, and 018F4701.

General-purpose valve, Model(s): EVT followed by 1.2, 2.0 or 3.0 , followed by NC, followed by 068F0600, -01, -11, -20, -21 or -22, with coil assembly part nos. 018F4180 or -81.

General-purpose valve, "EV215B", Model(s): EV215B followed by 3, followed by BD, BE or SS, followed by N, followed by 14, followed by T, followed by NC, may be followed by ULC, with coil assemblies 018F7686, -87, -88, -96, -97, -98 or 018F4100, -01, -02, -03, -04, -05, -06, -07, -08, -09, -10, -11, -12, -13, -14, -15, -16, -17, -18, -19, -20, -21, -22, -23, -24, -25, -26, -27, -28, -29.

General-purpose valve, "EV225B", Model(s): EV225B followed by 6, 10, 15, 20 or 25, followed by BD or BE, followed by N, followed by 1, 12, 14, 34 or 38, followed by T, followed by NC, may be followed ULC, with coil assemblies 018F7686, -87, -88, -96, -97, -98 or 018F4100, -01, -02, -03, -04, -05, -06, -07, -08, -09, -10, -11, -12, -13, -14, -15, -16, -17, -18, -19, -20, -21, -22, -23, -24, -25, -26, -27, -28, -29.

Last Updated on 2023-07-25

The appearance of a company's name or product in this database does not in itself assure that products so identified have been manufactured under UL Solutions' Follow - Up Service. Only those products bearing the UL Mark should be considered to be Certified and covered under UL Solutions' Follow - Up Service. Always look for the Mark on the product.

UL Solutions permits the reproduction of the material contained in Product iQ subject to the following conditions: 1. The Guide Information, Assemblies, Constructions, Designs, Systems, and/or Certifications (files) must be presented in their entirety and in a non-misleading manner, without any manipulation of the data (or drawings). 2. The statement "Reprinted from Product iQ with permission from UL Solutions" must appear adjacent to the extracted material. In addition, the reprinted material must include a copyright notice in the following format: "©2023 UL LLC."

Note: We are enhancing our systems and you may notice duplicate entries/missing/outdated data. During this interim period, please contact our Customer Service at <https://www.ul.com/about/locations>.


Valves, Electrically Operated Certified for Canada - Component

COMPANY

DANFOSS A/S

Bldg E14s1a
Nordborgvej 81
6430 Nordborg
Nordborg, Syddanmark 6430 Denmark

MH7648

Marking: Company name model designation, and the Recognized Component Mark for Canada 
Note: For additional marking information, refer to the [Guide Information Page](#).

Electrically Operated Valves, Model(s): EVR10 followed by NC, with or without M, followed by 032F, followed by any 4 digit number, with coil assembly Part No. 018F7641.

Electrically Operated Valves, Model(s): EVR15 followed by NC, followed by 032F, followed by any 4 digit number, with coil assembly Part Nos. 018F7654, -55, -58, -60, -61, -62, -63, -64 or -65, and Part No. 018F4139.

Electrically Operated Valves, Model(s): EVR15 followed by NO, followed by 032F or 032L, followed by any 4 digit number, with coil assembly Part Nos. 018F7654, -55, -58, -60, -61, -62, -63, -64 or -65, and Part No. 018F4139.

Electrically Operated Valves, Model(s): EVR18 followed by NC, with or without M, followed by 032F, followed by any 4 digit number, with coil assembly Part No. 018F7641.

Electrically Operated Valves, Model(s): EVR2 followed by NC, followed by 032F, followed by any 4 digit number, with coil assembly Part Nos. 018F7654, -55, -58, -60, -61, -62, -63, -64 or -65, and Part No. 018F4139.

Electrically Operated Valves, Model(s): EVR20 followed by NC, with or without M, followed by 032F, followed by any 4 digit number, with coil assembly Part No. 018F7641.

Electrically Operated Valves, Model(s): EVR22 followed by NC, followed by 032F, followed by any 4 digit number, with coil assembly Part Nos. 018F7654, -55, -58, -60, -61, -62, -63, -64 or -65, and Part No. 018F4139.

Electrically Operated Valves, Model(s): EVR22 followed by NO, followed by 032F or 032L, followed by any 4 digit number, with coil assembly Part Nos. 018F7654, -55, -58, -60, -61, -62, -63, -64 or -65, and Part No. 018F4139.

Electrically Operated Valves, Model(s): EVR25 followed by NC, with or without M, followed by 032F, followed by any 4 digit number, with coil assembly Part No. 018F7641.

Electrically Operated Valves, Model(s): EVR3 followed by NO, followed by 032F, followed by any 4 digit number, with coil assembly Part Nos. 018F7654, -55, -58, -60, -61, -62, -63, -64 or -65, and Part No. 018F4139.

Electrically Operated Valves, Model(s): EVR32 followed by NO, followed by 032L or 042H, followed by any 4 digit number, with coil assembly Part Nos. 018F7654, -55, -58, -60, -61, -62, -63, -64 or -65, and Part No. 018F4139.

Electrically Operated Valves, Model(s): EVR32 followed by NC, followed by 042H, followed by any 4 digit number, with coil assembly Part Nos. 018F7654, -55, -58, -60, -61, -62, -63, -64 or -65, and Part No. 018F4139.

Electrically Operated Valves, Model(s): EVR4 followed by NC, followed by 032F, followed by any 4 digit number, with coil assembly Part Nos. 018F7654, -55, -58, -60, -61, -62, -63, -64 or -65, and Part No. 018F4139.

Electrically Operated Valves, Model(s): EVR4 followed by NO, followed by 032F or 032L, followed by any 4 digit number, with coil assembly Part Nos. 018F7654, -55, -58, -60, -61, -62, -63, -64 or -65, and Part No. 018F4139.

Electrically Operated Valves, Model(s): EVR4.2 followed by NC, followed by 032F, followed by any 4 digit number, with coil assembly Part Nos. 018F7654, -55, -58, -60, -61, -62, -63, -64 or -65, and Part No. 018F4139.

Electrically Operated Valves, Model(s): EVR40 followed by NC, with or without M, followed by 032L, followed by any 4 digit number, with coil assembly Part Nos. 018F7654, -55, -58, -60, -61, -62, -63, -64 or -65, and Part No. 018F4139.

Electrically Operated Valves, Model(s): EVR40 followed by NO, followed by 032L or 042H, followed by any 4 digit number, with coil assembly Part Nos. 018F7654, -55, -58, -60, -61, -62, -63, -64 or -65, and Part No. 018F4139.

Electrically Operated Valves, Model(s): EVR6 followed by NC, with or without M, followed by 032F, followed by any 4 digit number, with coil assembly Part No. 018F7641.

Electrically Operated Valves, Model(s): EVR6 followed by NO, followed by 032F or 032L, followed by any 4 digit number, with coil assembly Part Nos. 018F7654, -55, -58, -60, -61, -62, -63, -64 or -65, and Part No. 018F4139.

Electrically Operated Valves, Model(s): EVR8 followed by NC, followed by 032F, followed by any 4 digit number, with coil assembly Part Nos. 018F7654, -55, -58, -60, -61, -62, -63, -64 or -65, and Part No. 018F4139.

Electrically Operated Valves, Model(s): EVR8 followed by NO, followed by 032F or 032L, followed by any 4 digit number, with coil assembly Part Nos. 018F7654, -55, -58, -60, -61, -62, -63, -64 or -65, and Part No. 018F4139.

Electrically Operated Valves, Model(s): EVRH10 followed by NO, followed by 032G, followed by any 4 digit number, with coil assembly Part Nos. 018F7654, -55, -58, -60, -61, -62, -63, -64 or -65, and Part No. 018F4139.

Electrically Operated Valves, Model(s): EVRH15 followed by NO, followed by 032G, followed by any 4 digit number, with coil assembly Part Nos. 018F7654, -55, -58, -60, -61, -62, -63, -64 or -65, and Part No. 018F4139.

Electrically Operated Valves, Model(s): EVRH25 followed by NO, followed by 032G, followed by any 4 digit number, with coil assembly Part Nos. 018F7654, -55, -58, -60, -61, -62, -63, -64 or -65, and Part No. 018F4139.

Electrically Operated Valves, Model(s): EVRH32 followed by NO, followed by 032G, followed by any 4 digit number, with coil assembly Part Nos. 018F7654, -55, -58, -60, -61, -62, -63, -64 or -65, and Part No. 018F4139.

Electrically Operated Valves, Model(s): EVRH40 followed by NO, followed by 032G, followed by any 4 digit number, with coil assembly Part Nos. 018F7654, -55, -58, -60, -61, -62, -63, -64 or -65, and Part No. 018F4139.

Electrically Operated Valves, Model(s): EVRH6 followed by NO, followed by 032G, followed by any 4 digit number, with coil assembly Part Nos. 018F7654, -55, -58, -60, -61, -62, -63, -64 or -65, and Part No. 018F4139.

Electrically Operated Valves, Model(s): Type EV310A followed by 1.2, 1.5 or 2.0, followed by B or S, followed by G14 or G18, followed by F, followed by NC or NO, followed by 000, with Coil Assembly Part Nos. 042N1191, -92, and -93, or 042N4291, -92 and -93.

Electrically Operated Valves, "EVR", Model(s): EVR10 followed by NC, with or without M, followed by 032L, followed by any 4 digit number, with coil assembly Part Nos. 018F7654, -55, -58, -60, -61, -62, -63, -64 or -65, and Part No. 018F4139.

Electrically Operated Valves, "EVR", Model(s): EVR15 followed by NC, with or without M, followed by 032L, followed by any 4 digit number, with coil assembly Part Nos. 018F7654, -55, -58, -60, -61, -62, -63, -64 or -65, and Part No. 018F4139.

Electrically Operated Valves, "EVR", Model(s): EVR18 followed by NC, with or without M, followed by 032L, followed by any 4 digit number, with coil assembly Part Nos. 018F7654, -55, -58, -60, -61, -62, -63, -64 or -65, and Part No. 018F4139.

Electrically Operated Valves, "EVR", Model(s): EVR2 followed by NO, followed by 032F, followed by any 4 digit number, with coil assembly Part Nos. 018F7654, -55, -58, -60, -61, -62, -63, -64 or -65, and Part No. 018F4139.

Electrically Operated Valves, "EVR", Model(s): EVR20 followed by NC, with or without M, followed by 032L, followed by any 4 digit number, with coil assembly Part Nos. 018F7654, -55, -58, -60, -61, -62, -63, -64 or -65, and Part No. 018F4139.

Electrically Operated Valves, "EVR", Model(s): EVR22 followed by NC, with or without M, followed by 032L, followed by any 4 digit number, with coil assembly Part Nos. 018F7654, -55, -58, -60, -61, -62, -63, -64 or -65, and Part No. 018F4139.

Electrically Operated Valves, "EVR", Model(s): EVR25 followed by NC, with or without M, followed by 032L, followed by any 4 digit number, with coil assembly Part Nos. 018F7654, -55, -58, -60, -61, -62, -63, -64 or -65, and Part No. 018F4139.

Electrically Operated Valves, "EVR", Model(s): EVR3 followed by NC, with or without M, followed by 032F, followed by any 4 digit number, with coil assembly Part No. 018F7641.

Electrically Operated Valves, "EVR", Model(s): EVR32 followed by NC, with or without M, followed by 032F, followed by any 4 digit number, with coil assembly Part No. 018F7641.

Electrically Operated Valves, "EVR", Model(s): EVRH8 followed by NC, followed by 032G, followed by any 4 digit number, with coil assembly Part Nos. 018F7654, -55, -58, -60, -61, -62, -63, -64 or -65, and Part No. 018F4139.

General Purpose Valve, Model(s): EV220A25B followed by G, followed by 1, followed by E, followed by NC, followed by 000, with Coil Assembly Part Nos. 042N1191, -92 and -93 or 042N4291, -92 and -93.

General Purpose Valve, Model(s): EV220W10B followed by N or G, followed by 12 or 38, followed by N, E or F, followed by NC or NO, followed by 000, with Coil Assembly Part Nos. 042N4201, -02 and -03 and 042N7601, -08, -12, -16, -17, -91, -92 and -93.

General Purpose Valve, Model(s): EV220W12B followed by N or G, followed by 12, followed by N, E or F, followed by NC or NO, followed by 000, with Coil Assembly Part Nos. 042N4201, -02 and -03 and 042N7601, -08, -12, -16, -17, -91, -92 and -93.

General Purpose Valve, Model(s): EV220W14B followed by N or G, followed by 12, followed by N, E or F, followed by NC or NO, followed by 000, with Coil Assembly Part Nos. 042N4201, -02 and -03 and 042N7601, -08, -12, -16, -17, -91, -92 and -93.

General Purpose Valve, Model(s): EV220W14B MIX with Coil Assembly Part Nos. 042N4201, -02 and -03 and 042N7601, -08, -12, -16, -17, -91, -92, and -93.

General Purpose Valve, Model(s): EV220W18B followed by N or G, followed by 34, followed by N, E or F, followed by NC or NO, followed by 000, with Coil Assembly Part Nos. 042N4201, -02 and -03 and 042N7601, -08, -12, -16, -17, -91, -92 and -93.

General Purpose Valve, Model(s): EV220W22 followed by N or G, followed by 1, followed by N, E or F, followed by NC or NO, followed by 000, with Coil Assembly Part Nos. 042N4201, -02 and -03 and 042N7601, -08, -12, -16, -17, -91, -92 and -93.

General Purpose Valve, Model(s): EV220W25B followed by N or G, followed by 1, followed by E, followed by NC or NO, followed by 000, with Coil Assembly Part Nos. 042N4201, -02 and -03 and 042N7601, -08, -12, -16, -17, -91, -92 and -93.

General Purpose Valve, Model(s): EV220W32B followed by N or G, followed by 114, followed by N, E or F, followed by NC or NO, followed by 000, with Coil Assembly Part Nos. 042N4201, -02 and -03 and 042N7601, -08, -12, -16, -17, -91, -92 and -93.

General Purpose Valve, Model(s): EV220W40B followed by N or G, followed by 112, followed by N, E or F, followed by NC or NO, followed by 000, with Coil Assembly Part Nos. 042N4201, -02 and -03 and 042N7601, -08, -12, -16, -17, -91, -92 and -93.

General Purpose Valve, Model(s): EV220W50B followed by N or G, followed by 2, followed by N, E or F, followed by NC or NO, followed by 000, with Coil Assembly Part Nos. 042N4201, -02 and -03 and 042N7601, -08, -12, -91, -92 and -93.

General Purpose Valve, Model(s): EV220W6B followed by N or G, followed by 14 or 38, followed by N, E or F, followed by NC or NO, followed by 000, with Coil Assembly Part Nos. 042N4201, -02 and -03 and 042N7601, -08, -12, -16, -17, -91, -92 and -93.

General Purpose Valve, Model(s): Types EVR6 followed by NC, with or without M, followed by 032F or 032L, followed by any 4 digit number, with coil assembly Part Nos. 018F4100, -01, -02, -03, -04, -05, -06, -07, -08, -09, -10, -11, -12, -13, -14, -15, -16, -17, -18, -19, -20, -21, -22, -23, -24, -25, 26, -27, -28, -29, -30, -31, -32, -33, -34, or -35.

General purpose valves, Model(s): EV220A12B

General purpose valves, Model(s): EV210A with Coil PN: 042N1191, 042N1192, 042N1193, 042N4204, 042N4205, 042N4206, 042N4208, 042N4209 or 042N4210.

General purpose valves, Model(s): EV220A10B followed by N or G, followed by 12 or 38, followed by E, F or N, followed by NC or NO, followed by 000, with Coil Assembly Part Nos. 042N1191, -92 and -93 or 042N4291, -92 and -93

General purpose valves, Model(s): EV220A14B followed by N or G, followed by 12, followed by E, F or N, followed by NC or NO, followed by 000, with Coil Assembly Part Nos. 042N1191, -92 and -93 or 042N4291, -92 and -93

General purpose valves, Model(s): EV220A14B MIX with Coil Assembly Part Nos. 042N1191, -92 and -93 or 042N4291, -92 and -93

General purpose valves, Model(s): EV220A18B followed by N or G, followed by 34, followed by E, F or N, followed by NC or NO, followed by 000, with Coil Assembly Part Nos. 042N1191, -92 and -93 or 042N4291, -92 and -93

General purpose valves, Model(s): EV220A22B followed by N or G, followed by 1, followed by E, F or N, followed by NC or NO, followed by 000, with Coil Assembly Part Nos. 042N1191, -92 and -93 or 042N4291, -92 and -93

General purpose valves, Model(s): EV220A6B followed by N or G, followed by 14 or 38, followed by E, F or N, followed by NC or NO, followed by 000, with Coil Assembly Part Nos. 042N1191, -92 and -93 or 042N4291, -92 and -93.

General purpose valves, Model(s): EV220T followed by 14 or 18, followed by P, followed by GEH, GE34, GHTH, GHTH34, GHTNP, NESH or NES34, followed by E, followed by NC, may be followed by URC, with coil assembly Part Nos. 042N4291, -92 or -93 coil assembly part nos. 042N4201, -02 or -03 or coil assembly part nos. 042N7601, -08, -12, -16, -17, -91, -92 or -93..

General purpose valves, Model(s): EV310A followed by 1.2, 1.5 or 2.0, followed by B or S, followed by G14 or G18, followed by F, followed by NC or NO, followed by 000, with Coil PN: 042N1191, 042N1192 or 042N1193

General purpose valves, Model(s): EVR10 followed by NC, followed by 032F, followed by any 4 digit number, with coil assembly Part Nos. 018F7654, -55, -58, -60, -61, -62, -63, -64 or -65, and Part No. 018F4139.

General purpose valves, Model(s): EVR18 followed by NC, followed by 032F, followed by any 4 digit number, with coil assembly Part Nos. 018F7654, -55, -58, -60, -61, -62, -63, -64 or -65, and Part No. 018F4139.

General purpose valves, Model(s): EVR20 followed by NC, followed by 032F, followed by any 4 digit number, with coil assembly Part Nos. 018F7654, -55, -58, -60, -61, -62, -63, -64 or -65, and Part No. 018F4139.

General purpose valves, Model(s): EVR25 followed by NC, followed by 032F, followed by any 4 digit number, with coil assembly Part Nos. 018F7654, -55, -58, -60, -61, -62, -63, -64 or -65, and Part No. 018F4139.

General purpose valves, Model(s): EVR3 followed by NC, followed by 032F, followed by any 4 digit number, with coil assembly Part Nos. 018F7654, -55, -58, -60, -61, -62, -63, -64 or -65, and Part No. 018F4139.

General purpose valves, Model(s): EVR32 followed by NC, with or without M, followed by 032L, followed by any 4 digit number, with coil assembly Part Nos. 018F7654, -55, -58, -60, -61, -62, -63, -64 or -65, and Part No. 018F4139.

General purpose valves, Model(s): EVR6 followed by NC, followed by 032F, followed by any 4 digit number, with coil assembly Part Nos. 018F7654, -55, -58, -60, -61, -62, -63, -64 or -65, and Part No. 018F4139.

General purpose valves, Model(s): EVRB followed by F4086, with Coil Assembly Part Nos. 018F4100, -02, -10, -12, -20 and -22

General purpose valves, Model(s): EVRB 032F620, with Coil Assembly PN: 018F7654

General purpose valves, Model(s): EVRC10 followed by NC, followed by 032F or 032L, followed by any 4 digit number, with coil assembly Part Nos. 018F7654, -55, -58, -60, -61, -62, -63, -64 or -65, and Part No. 018F4139.

General purpose valves, Model(s): EVRC15 followed by NC, followed by 032F or 032L, followed by any 4 digit number, with coil assembly Part Nos. 018F7654, -55, -58, -60, -61, -62, -63, -64 or -65, and Part No. 018F4139.

General purpose valves, Model(s): EVRC20 followed by NC, followed by 032F or 032L, followed by any 4 digit number, with coil assembly Part Nos. 018F7654, -55, -58, -60, -61, -62, -63, -64 or -65, and Part No. 018F4139.

General purpose valves, Model(s): EVRF followed by F1937, with Coil Assembly Part Nos. 018F4113 and -22

General purpose valves, Model(s): EVRF F3045 with Coil Assembly Part Nos. 018F4100, -02, -10, -12, -20 and -22

General purpose valves, Model(s): EVRF F3046 with Coil Assembly Part Nos. 018F4100, -02, -10, -12, -20 and -22

General purpose valves, Model(s): EVRF F3047 with Coil Assembly Part Nos. 018F4100, -02, -10, -12, -20 and -22

General purpose valves, Model(s): EVRF F3048 with Coil Assembly Part Nos. 018F4100, -02, -10, -12, -20 and -22

General purpose valves, Model(s): EVRF F3051 with Coil Assembly Part Nos. 018F4100, -02, -10, -12, -20 and -22

General purpose valves, Model(s): EVRF F3284 with Coil Assembly Part Nos. 018F4100, -02, -10, -12, -20 and -22

General purpose valves, Model(s): EVRF F4047 with Coil Assembly Part Nos. 018F4100, -02, -10, -12, -20 and -22

General purpose valves, Model(s): EVRF-3W followed by F3134, F3136, F3139, F3141 or F3144, with Coil Enclosure PN: 018Z7511, 018Z7512, 018Z7513, 018Z7521, 018Z7522 or 018Z7523.

General purpose valves, Model(s): EVU1 with Coil Assembly PN: 042N4201, 042N4202, 042N4203, 042N4211, 042N4212, 042N4213, 042N4214, 042N4215, 042N4221, 042N4222, 042N4223, 042N4224, 042N4225, 042N4230, 042N4231, 042N4232, 042N4233, 042N4234, 042N4235, 042N4236, 042N4237, 042N4238, 042N7601, 042N7608 or 042N7612.

General purpose valves, Model(s): EVU2 with Coil Assembly PN: 042N4201, 042N4202, 042N4203, 042N4211, 042N4212, 042N4213, 042N4214, 042N4215, 042N4221, 042N4222, 042N4223, 042N4224, 042N4225, 042N4230, 042N4231, 042N4232, 042N4233, 042N4234, 042N4235, 042N4236, 042N4237, 042N4238, 042N7601, 042N7608 or 042N7612.

General purpose valves, Model(s): EVU3 with Coil Assembly PN: 042N4201, 042N4202, 042N4203, 042N4211, 042N4212, 042N4213, 042N4214, 042N4215, 042N4221, 042N4222, 042N4223, 042N4224, 042N4225, 042N4230, 042N4231, 042N4232, 042N4233, 042N4234, 042N4235, 042N4236, 042N4237, 042N4238, 042N7601, 042N7608 or 042N7612.

General purpose valves, Model(s): EVU4 with Coil Assembly PN: 042N4201, 042N4202, 042N4203, 042N4211, 042N4212, 042N4213, 042N4214, 042N4215, 042N4221, 042N4222, 042N4223, 042N4224, 042N4225, 042N4230, 042N4231, 042N4232, 042N4233, 042N4234, 042N4235, 042N4236, 042N4237, 042N4238, 042N7601, 042N7608 or 042N7612.

General purpose valves, Model(s): EVU5 with Coil Assembly PN: 042N4201, 042N4202, 042N4203, 042N4211, 042N4212, 042N4213, 042N4214, 042N4215, 042N4221, 042N4222, 042N4223, 042N4224, 042N4225, 042N4230, 042N4231, 042N4232, 042N4233, 042N4234, 042N4235, 042N4236, 042N4237, 042N4238, 042N7601, 042N7608 or 042N7612.

General purpose valves, Model(s): EVU6 with Coil Assembly PN: 042N4201, 042N4202, 042N4203, 042N4211, 042N4212, 042N4213, 042N4214, 042N4215, 042N4221, 042N4222, 042N4223, 042N4224, 042N4225, 042N4230, 042N4231, 042N4232, 042N4233, 042N4234, 042N4235, 042N4236, 042N4237, 042N4238, 042N7601, 042N7608 or 042N7612.

General purpose valves, Model(s): EVU8 with Coil Assembly PN: 042N4201, 042N4202, 042N4203, 042N4211, 042N4212, 042N4213, 042N4214, 042N4215, 042N4221, 042N4222, 042N4223, 042N4224, 042N4225, 042N4230, 042N4231, 042N4232, 042N4233, 042N4234, 042N4235, 042N4236, 042N4237, 042N4238, 042N7601, 042N7608 or 042N7612.

General purpose valves, Model(s): EVUB1 with Coil Assembly PN: 042N4201, 042N4202, 042N4203, 042N4211, 042N4212, 042N4213, 042N4214, 042N4215, 042N4221, 042N4222, 042N4223, 042N4224, 042N4225, 042N4230, 042N4231, 042N4232, 042N4233, 042N4234, 042N4235, 042N4236, 042N4237, 042N4238, 042N7601, 042N7608 or 042N7612.

General purpose valves, Model(s): EVUF2 with Coil Assembly PN: 042N4201, 042N4202, 042N4203, 042N4211, 042N4212, 042N4213, 042N4214, 042N4215, 042N4221, 042N4222, 042N4223, 042N4224, 042N4225, 042N4230, 042N4231, 042N4232, 042N4233, 042N4234, 042N4235, 042N4236, 042N4237, 042N4238, 042N7601, 042N7608 or 042N7612.

General purpose valves, Model(s): EVUL1 with Coil Assembly PN: 042N4201, 042N4202, 042N4203, 042N4211, 042N4212, 042N4213, 042N4214, 042N4215, 042N4221, 042N4222, 042N4223, 042N4224, 042N4225, 042N4230, 042N4231, 042N4232, 042N4233, 042N4234, 042N4235, 042N4236, 042N4237, 042N4238, 042N7601, 042N7608 or 042N7612.

General purpose valves, Model(s): EVUL2 with Coil Assembly PN: 042N4201, 042N4202, 042N4203, 042N4211, 042N4212, 042N4213, 042N4214, 042N4215, 042N4221, 042N4222, 042N4223, 042N4224, 042N4225, 042N4230, 042N4231, 042N4232, 042N4233, 042N4234, 042N4235, 042N4236, 042N4237, 042N4238, 042N7601, 042N7608 or 042N7612.

General purpose valves, Model(s): EVUL3 with Coil Assembly PN: 042N4201, 042N4202, 042N4203, 042N4211, 042N4212, 042N4213, 042N4214, 042N4215, 042N4221, 042N4222, 042N4223, 042N4224, 042N4225, 042N4230, 042N4231, 042N4232, 042N4233, 042N4234, 042N4235, 042N4236, 042N4237, 042N4238, 042N7601, 042N7608 or 042N7612.

General purpose valves, Model(s): EVUL4 with Coil Assembly PN: 042N4201, 042N4202, 042N4203, 042N4211, 042N4212, 042N4213, 042N4214, 042N4215, 042N4221, 042N4222, 042N4223, 042N4224, 042N4225, 042N4230, 042N4231, 042N4232, 042N4233, 042N4234, 042N4235, 042N4236, 042N4237, 042N4238, 042N7601, 042N7608 or 042N7612.

General purpose valves, Model(s): EVUL5 with Coil Assembly PN: 042N4201, 042N4202, 042N4203, 042N4211, 042N4212, 042N4213, 042N4214, 042N4215, 042N4221, 042N4222, 042N4223, 042N4224, 042N4225, 042N4230, 042N4231, 042N4232, 042N4233, 042N4234, 042N4235, 042N4236, 042N4237, 042N4238, 042N7601, 042N7608 or 042N7612.

General purpose valves, Model(s): EVUL6 with Coil Assembly PN: 042N4201, 042N4202, 042N4203, 042N4211, 042N4212, 042N4213, 042N4214, 042N4215, 042N4221, 042N4222, 042N4223, 042N4224, 042N4225, 042N4230, 042N4231, 042N4232, 042N4233, 042N4234, 042N4235, 042N4236, 042N4237, 042N4238, 042N7601, 042N7608 or 042N7612.

General purpose valves, Model(s): Type EVRF followed by 032F6351, with coil assembly Part No. 018F4113

General purpose valves, Model(s): Types EVRA followed by 1.5 F3006 or 3.5 F3007 with coil assembly Part Nos. 018F7654, -55, -58, -60, -61, -62, 63, -64 or -65 Part Nos. 018F4100, -02, -03, -04, -10, -12, -13, -14, -15, -20, -22, -23, -30, -31, -32, -33, -34, -35 or -39 and Part Nos. 018F6968, 018F8044, 018F8045 or 018F8393

General purpose valves, Model(s): VDHT followed by 3/8, 1/2, 3/4 or 1, followed by E, EA or ED, followed by NC or NO, with or without an eight-digit customer number.

General purpose valves, Model(s): VDHT followed by 15, followed by E, followed by 3/2, followed by NC, followed by NO, with or without an eight-digit number

General purpose valves, Model(s): VDHT followed by B2, B3, B4, BL2, BL2S or BL3, followed by 1/2, 3/4 or 1, followed by -1/2 or -3/4, followed by NC, NC/NO or NO, with or without an eight-digit customer number

General-purpose valve, Model(s): ETS 6 - 10, ETS 6 - 10, ETS 6 - 14, ETS 6 - 14, ETS 6 - 18, ETS 6 - 18, ETS 6 - 25, ETS 6 - 25, ETS 6 - 30, ETS 6 - 30, ETS 6 - 32, ETS 6 - 40, ETS 6 - 40, ETS 6 - 32

General-purpose valve, Model(s): 034G88 followed by 00, 01, 02, 03, 04, 05, 06, 07, 08, 09, 10 or 11, followed by ETS 8M, followed by 40, 45, 55 or 65, followed by L or S

General-purpose valve, Model(s): ETS followed by 12, 24, 25, 50 or 100, followed by C.

General-purpose valve, Model(s): ETS followed by 12.5, 25, 25B, 50, 100 or 400.

General-purpose valve, Model(s): ETS followed by 175, 250, 400 or 500, followed by L.

General-purpose valve, Model(s): ETS followed by 500 or 800, followed by P.

General-purpose valve, Model(s): EV215B followed by 3, followed by BD, BE or SS, followed by N or G, followed by 14, followed by T, followed by NC, may be followed by URC, with Coil Assembly Part Nos. 018F4511, -17 and -19 or 018F6968 or 018F7655, -58 and -63.

General-purpose valve, Model(s): EV220S10B followed by G, followed by 14 or 38, followed by E or F, followed by NC or NO, followed by 000 or 104, with Coil Assembly Part Nos. 042N4201, -02 and -03, and 042N7601, -08, -12, -16, -17, -91, -92 and -93.

General-purpose valve, Model(s): EV220S13B followed G, followed by 12, followed by E or F, followed by NC or NO, followed by 000 or 104, with Coil Assembly Part Nos. 042N4201, -02 and -03, and 042N7601, -08, -12, -16, -17, -91, -92 and -93.

General-purpose valve, Model(s): EV220S14B followed by G, followed by 12, followed by E or F, followed by NC or NO, followed by 000 or 104, with Coil Assembly Part Nos. 042N4201, -02 and -03, and 042N7601, -08, -12, -16, -17, -91, -92 and -93.

General-purpose valve, Model(s): EV220S17B followed by G, followed by 34, followed by E or F, followed by NC or NO, followed by 000 or 104, with Coil Assembly Part Nos. 042N4201, -02 and -03, and 042N7601, -08, -12, -16, -17, -91, -92 and -93.

General-purpose valve, Model(s): EV220S22B followed by G, followed by 1, followed by E or F, followed by NC or NO, followed by 000 or 104, with Coil Assembly Part Nos. 042N4201, -02 and -03, and 042N7601, -08, -12, -16, -17, -91, -92 and -93.

General-purpose valve, Model(s): EV220S25B followed by G, followed by 1, followed by E, followed by NC or NO, followed by 000 or 104, with Coil Assembly Part Nos. 042N4201, -02 and -03, and 042N7601, -08, -12, -16, -17, -91, -92 and -93.

General-purpose valve, Model(s): EV220S32B followed by G, followed by 114, followed by E or F, followed by NC or NO, followed by 000 or 104, with Coil Assembly Part Nos. 042N4201, -02 and -03, and 042N7601, -08, -12, -16, -17, -91, -92 and -93.

General-purpose valve, Model(s): EV220S40B followed by G, followed by 112, followed by E or F, followed by NC or NO, followed by 000 or 104, with Coil Assembly Part Nos. 042N4201, -02 and -03, and 042N7601, -08, -12, -16, -17, -91, -92 and -93.

General-purpose valve, Model(s): EV220S50B followed by G, followed by 2, followed by E or F, followed by NC or NO, followed by 000 or 104, with Coil Assembly Part Nos. 042N4201, -02 and -03, and 042N7601, -08, -12, -91, -92 and -93.

General-purpose valve, Model(s): EV225B followed by 6, 10, 15, 20 or 25, followed by BD or BE, followed by N or G, followed by 1, 12, 14, 34 or 38, followed by T, followed by NC, may be followed by URC, with Coil Assembly Part Nos. 018F4511, -17 and -19 or 018F6968 or 018F7655, -58 and -63.

General-purpose valve, Model(s): EV250B followed by 10, 12, 18 or 22, followed by BD or BE, followed by G or N, followed by 38, 12, 34 or 1, followed by E or F, followed by NC or NO, followed by 000, with Coil Assembly Part Nos. 018F7397 (suffix F only), or 018F6968, or 018F7655, -58 or -63.

General-purpose valve, Model(s): EV250BW followed by 10, 12, 18 or 22, followed by BD or BE, followed by G or N, followed by 38, 12, 34 or 1, followed by E or F, followed by NC or NO, followed by 000, with Coil Assembly Part Nos. 018F7397 (suffix F only), or 018F6968, 018F7655, -58 or -63.

General-purpose valve, Model(s): EVUL8 with Coil Assembly PN: 042N4201, 042N4202, 042N4203, 042N4211, 042N4212, 042N4213, 042N4214, 042N4215, 042N4221, 042N4222, 042N4223, 042N4224, 042N4225, 042N4230, 042N4231, 042N4232, 042N4233, 042N4234, 042N4235, 042N4236, 042N4237, 042N4238, 042N7601, 042N7608 or 042N7612.

General-purpose valve, Model(s): KVS followed by 1, 2, 3 or 5, followed by C.

General-purpose valve, "CCM", Model(s): CCM followed by 10, 20, 30 or 40, followed by 027H, followed by a 4 digit number.

General-purpose valve, "CCMT w/suffix L", Model(s): CCMT followed by 3, 5, 8 or 10, followed by L, followed by 027H, followed by a 4 digit number.

General-purpose valve, "CCMT", Model(s): CCMT followed by 2, 4, 8, 16, 24, 30 or 42, followed by 027H, followed by a 4 digit number

Last Updated on 2023-06-30

The appearance of a company's name or product in this database does not in itself assure that products so identified have been manufactured under UL Solutions' Follow - Up Service. Only those products bearing the UL Mark should be considered to be Certified and covered under UL Solutions' Follow - Up Service. Always look for the Mark on the product.

UL Solutions permits the reproduction of the material contained in Product iQ subject to the following conditions: 1. The Guide Information, Assemblies, Constructions, Designs, Systems, and/or Certifications (files) must be presented in their entirety and in a non-misleading manner, without any manipulation of the data (or drawings). 2. The statement "Reprinted from Product iQ with permission from UL Solutions" must appear adjacent to the extracted material. In addition, the reprinted material must include a copyright notice in the following format: "©2023 UL LLC."